


4100 SERIES
DIGITAL OHMMETERS


OPERATION MANUAL



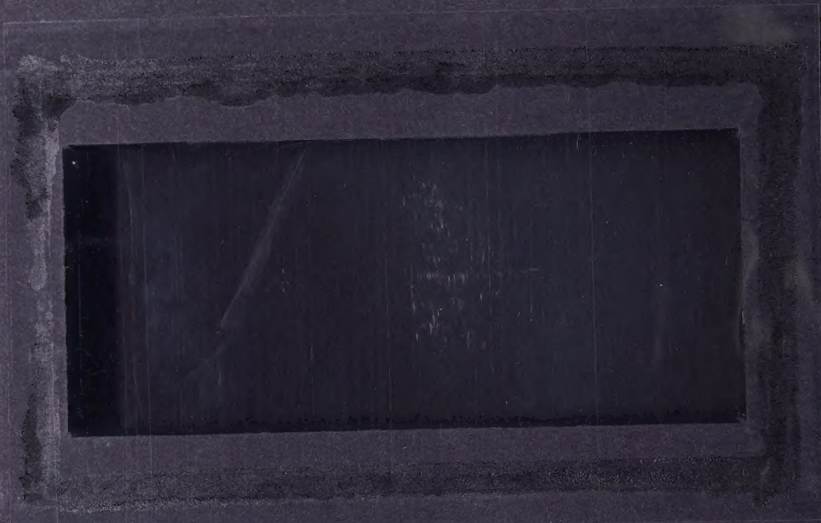

**4100 SERIES
DIGITAL OHMMETERS**

OPERATION MANUAL



**9955 MESA RIM ROAD
SAN DIEGO, CA 92121
(619) 457-5576
(619) 457-0127 Fax**

CERTIFICATION

Valhalla Scientific, Inc. certifies that this instrument was thoroughly tested and inspected and found to meet published specifications when shipped from the factory. Valhalla Scientific, Inc. further certifies that its calibration measurements are traceable to the National Institute of Standards and Technology to the extent allowed by NIST's calibration facility.



WARRANTY

The warranty period for this instrument is stated on your invoice and packing list. Please refer to these to determine appropriate warranty dates. We will repair or replace the instrument during the warranty period provided it is returned to Valhalla Scientific, Inc. freight prepaid. No other warranty is expressed or implied. We are not liable for consequential damages. Permission and a return authorization number must be obtained directly from the factory for warranty repairs. No liability will be accepted if returned without such permission. Due to continuing product refinement and due to possible parts manufacturer changes, Valhalla Scientific reserves the right to change any or all specifications without notice.

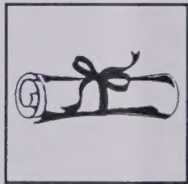


TABLE OF CONTENTS

SECTION 5: UNPACKING AND INSTALLATION

- 5.1 Introduction
- 5.2 Inspection
- 5.3 User Package/Case Safety
- 5.4 Setup Site
- 5.5 Floor Mounting
- 5.6 Safety Precautions

SECTION 16: SPECIFICATIONS

- 16.1 General
- 16.2 Accuracy
- 16.3 Display Configuration
- 16.4 Environmental Requirements
- 16.5 Environmental Calibration Interval

This manual covers the following Valhalla Scientific products:

Models 4100ATC, 4150ATC, 4165 and 4165-1344

SECTION 25: INPUT SIGNALS, CONTROLS

- 25.1 General
- 25.2 Input Signals
- 25.3 Analog Inputs
- 25.4 Digital Inputs
- 25.5 TEMPERATURE COMPENSATION
- 25.6 VOLTAGE AND CURRENT Transmits
- 25.7 Zero Offset
- 25.8 OPEN/SHORT/NO-LOAD Status
- 25.9 Input Range
- 25.10 Input Accuracy

SECTION 26: TEST POINT CONNECTORS

- 26.1 General
- 26.2 Power Outputs
- 26.3 Potentiometer
- 26.4 Input/Outputs
- 26.5 Other Test Points

TABLE OF CONTENTS

SECTION I: UNPACKING AND INSTALLATION



- 1-1 Introduction
- 1-2 Inspection
- 1-3 Line Voltage/Fuse Selection
- 1-4 Bench Use
- 1-5 Rack Mounting
- 1-6 Safety Precautions

SECTION II: SPECIFICATIONS



- 2-1 General
- 2-2 Accuracy
- 2-3 General Specifications
- 2-4 Environmental Requirements
- 2-5 Recommended Calibration Interval

SECTION III: OPTIONAL EQUIPMENT



- 3-1 General
- 3-2 Accessories and Options
- 3-3 Test Leads

SECTION IV: FRONT PANEL CONTROLS



- 4-1 General
- 4-2 POWER Switch
- 4-3 RANGE Switches
- 4-4 STD/T.C. Switches
- 4-5 TEMPERATURE COMPENSATOR Connector
- 4-6 VOLTAGE and CURRENT Terminals
- 4-7 ZERO Control
- 4-8 OPEN CIRCUIT VOLTAGE Switches
- 4-9 PRINT Switch
- 4-10 RESISTANCE Window

SECTION V: REAR PANEL CONNECTORS



- 5-1 General
- 5-2 Power Connector
- 5-3 Fuseholder
- 5-4 BCD Interface
- 5-5 Other Interfaces

SECTION VI: MANUAL OPERATION



- 6-1 General
- 6-2 Connections
- 6-3 4100ATC and 4150ATC Operation
- 6-4 4165 Operation
- 6-5 4165-1344 Operation
- 6-6 Temperature Compensation

Figure 6-1. Error Sources in Resistance Measurements

SECTION VII: INTERFACE OPERATION



- 7-1 General
- 7-2 BCD Interface
- 7-3 Other Interfaces

SECTION VIII: ROUTINE MAINTENANCE



- 8-1 General
- 8-2 Required Test Equipment
- 8-3 Calibration Procedure
- 8-4 Periodic Maintenance

SECTION IX: THEORY OF OPERATION



- 9-1 Troubleshooting
- 9-2 General Circuit Descriptions
- 9-3 Detailed Circuit Descriptions
- 9-4 Power Supplies
- 9-5 Constant-Current Source
- 9-6 Analog-to-Digital Convertor
- 9-7 Optional Interfaces

SECTION X: SPECIAL PROCEDURES



- 10-1 Noisy Readings
- 10-2 Connecting to Inductive Loads

SECTION XI: MANUAL CHANGES AND ADDENDUMS



SECTION XII: PARTS LISTS



SECTION XIII: DRAWINGS AND SCHEMATICS



SECTION I UNPACKING & INSTALLATION



1-1. Introduction

Welcome to the world of low resistance measurement! The precision instrument you have just purchased offers super-stable measurement capability for hard-to-test items such as transformers, coils, shunts, and even the resistance of wire itself. Other features include automatic temperature compensation and recently added interfacing options (Section 7). Please read this manual thoroughly and all accompanying addendums before attempting to operate this instrument.

1-2. Inspection

If the shipping carton is damaged, request that the carrier's agent be present when the unit is unpacked. If the instrument appears damaged, the carrier's agent should authorize repairs before the unit is returned to the factory. Even if the instrument appears undamaged, it may have suffered internal damage in transit that may not be evident until the unit is operated or tested to verify conformance with its specifications. If the unit fails to operate or fails to meet the performance specifications of Section 2, notify the carrier's agent and the nearest Valhalla Sales Office. Retain the shipping carton for the carrier's inspection. DO NOT return equipment to Valhalla Scientific or any of its sales offices prior to obtaining authorization to do so.

1-3. Line Voltage/Fuse Selection

The only adjustments required before placing the unit in operation are to verify that the instrument has been set for the proper local AC line voltage and to verify that the proper fuse for this voltage has been installed as follows: 105 to 125 VAC = $\frac{1}{4}$ Amp Slo-blo; 210 to 250 VAC = 0.125 Amp Slo-blo.

Note: These fuse values are doubled if any of the interfaces (IEEE, RS232, or Printer) are installed. Refer to rear-panel markings.

On older models the AC line voltage is selected internally by the configuration of the jumpers on pads 9 through 12. Pads 9-10 and 11-12 are jumpered together for 115VAC operation. Pads 9&12 only are jumpered for 230VAC operation.

On newer models the AC line voltage is selected via a sliding switch mounted on the rear panel of the instrument. The appropriate fuse values remain the same.

1-4. Bench Use

The unit is supplied with all the hardware required for bench use and special instructions for use in this manner are not necessary. The user should become familiar with Sections 4, 5 and 6 before attempting to operate the ohmmeter.

1-5. Rack Mounting

Optional brackets are available for mounting the ohmmeter in a standard 19" equipment rack. These are listed in Section 3. The size of the unit and the location of its center of gravity dictate that it must be supported on both sides along its entire length through the use of trays or slides. If it is to be transported while mounted in a rack, it should be supported so as to prevent upward or downward movement.

It is recommended that blank panels at least 1.75 inches high be installed between this and any other units in the rack to ensure freedom of air flow. Under no circumstances should the ambient air

temperature around the unit exceed 50°C while the unit is in operation or 70°C when power is removed.

1-6. Safety Precautions

The power plug must be a three-contact device and should be inserted only into a three-contact mating socket where the third contact provides a ground connection. If power is provided through an extension cable, the ground connection must be continuous. **Any discontinuity in the ground lead may render the unit unsafe for use!**

The testing of inductive loads such as transformers requires that special precautions be taken to avoid damage to the instrument and/or injury to the operator! Please refer to Section 10.



SECTION II SPECIFICATIONS



2-1. General

The specifications for the 4100 Series of Ohmmeters are listed in the following paragraphs. In all cases the specifications are valid for full Kelvin Four-Terminal measurements using connections having less than 20 milliohms of lead resistance per wire.

2-2. Accuracy

The accuracy specifications listed below are valid following a 30 minute warm-up at an ambient temperature between 15°C and 35°C for a period of 1 year following calibration, and include the effects of line voltage variations within the allowed range.

2-2-1. Model 4100ATC

<u>Range</u>	<u>Maximum Input</u>	<u>Resolution</u>	<u>Test Current</u>	<u>Accuracy</u>
.2Ω	.19999 ohms	.00001 Ω	1 amp	±0.02% of rdg ±2 digits
2Ω	1.9999 ohms	.0001 Ω	100 milliamps	±0.02% of rdg ±2 digits
20Ω	19.999 ohms	.001 Ω	10 milliamps	±0.02% of rdg ±2 digits
200Ω	199.99 ohms	.01 Ω	1 milliamp	±0.02% of rdg ±2 digits
2KΩ	1.9999K ohms	.0001 KΩ	100 microamps	±0.02% of rdg ±2 digits
20KΩ	19.999K ohms	.001 KΩ	10 microamps	±0.02% of rdg ±2 digits

Full Scale Test Voltage: 200mV

2-2-2. Model 4150ATC

<u>Range</u>	<u>Maximum Input</u>	<u>Resolution</u>	<u>Test Current</u>	<u>Accuracy</u>
20mΩ	19.999 milliohms	.001 mΩ	1 amp	±0.03% of rdg ±3 digits
200mΩ	199.99 milliohms	.01 mΩ	100 milliamps	±0.03% of rdg ±3 digits
2Ω	1.9999 ohms	.0001 Ω	10 milliamps	±0.03% of rdg ±3 digits
20Ω	19.999 ohms	.001 Ω	1 milliamp	±0.03% of rdg ±3 digits
200Ω	199.99 ohms	.01 Ω	100 microamps	±0.03% of rdg ±3 digits
2KΩ	1.9999K ohms	.0001 KΩ	10 microamps	±0.03% of rdg ±3 digits

Full Scale Test Voltage: 20mV

2-2-3. Model 4165

<u>Range</u>	<u>Maximum Input</u>	<u>Resolution</u>	<u>Test Current [1]</u>	<u>Accuracy</u>
.2Ω	.19999 ohms	.00001 Ω	100 milliamps	±0.03% of rdg ±3 digits
2Ω	1.9999 ohms	.0001 Ω	10 milliamps	±0.03% of rdg ±3 digits
20Ω	19.999 ohms	.001 Ω	1 milliamp	±0.03% of rdg ±3 digits
200Ω	199.99 ohms	.01 Ω	100 microamps	±0.03% of rdg ±3 digits
2KΩ	1.9999K ohms	.0001 KΩ	10 microamps	±0.03% of rdg ±3 digits
20KΩ	19.999K ohms	.001 KΩ	1 microamp	±0.03% of rdg ±3 digits

Full Scale Test Voltage: 20mV

[1] The Model 4165 uses reduced test currents and incorporates a user-selectable clamp on the current source for making "dry" measurements. The clamp may be set to 50mV or 2V.

2-2-4. Model 4165-1344

<u>Range</u>	<u>Maximum Input[2]</u>	<u>Resolution</u>	<u>Test Current [1]</u>	<u>Accuracy</u>
.2Ω	.19999 ohms	.00001 Ω	100 milliamps	±0.03% of rdg ±3 digits
2Ω	1.9999 ohms	.0001 Ω	10 milliamps	±0.03% of rdg ±3 digits
20Ω	19.999 ohms	.001 Ω	1 milliamp	±0.03% of rdg ±3 digits
200Ω	199.99 ohms	.01 Ω	100 microamps	±0.03% of rdg ±3 digits
2KΩ	1.9999K ohms	.0001 KΩ	10 microamps	±0.03% of rdg ±3 digits
20K	19.999K ohms	.001 KΩ	1 microamp	±0.03% of rdg ±3 digits

Full Scale Test Voltage: 20mV

- [1] The Model 4165-1344 uses reduced test currents and incorporates a user-selectable clamp on the current source for making "dry" measurements. The clamp may be set to 20mV or 2V. The 4165-1344 also has a reverse current mode that may be used to ensure a dry, true-ohms measurement.
- [2] If the clamp is set to "20mV", the Maximum Input specification is changed to: 20% of range for the .2Ω range or 50% of range for all other ranges.

2-3. General Specifications

Display Type: 4½ digit LED (20000 counts)

A-to-D Conversion Rate: 400 milliseconds

ATC Mode (4100 and 4150 only): Add ±0.05% + 0.001%/°C to accuracy spec

Compensator Accuracy: ±0.1% of rated temperature coefficient

Overrange: 100% of range (19999 counts on display)

Overrange Indication: Display flashes

Terminal Configuration: Four-wire Kelvin

Temperature Coefficient: ±0.002% /°C (0-15°C and 35-50°C)

Test Current Polarity: Negative (flows Low to High). 4165-1344 is selectable.

Test Current Compliance Voltage (4100,4150): 5 volts minimum

Test Current Compliance Voltage (4165): selectable clamp at 50mV or 2V (±5%)

Test Current Compliance Voltage (4165-1344): selectable clamp at 20mV or 2V (±5%)

Settling Time: 300 milliseconds + 1 conversion to within ±0.1%



2-4. Environmental Requirements

Common Mode Rejection Ratio: 60 db at DC to 60Hz.

Power Supply: 115VAC or 230VAC $\pm 10\%$ @ 50Hz to 400Hz; 25VA max

Operating Temperature Range: 0°C to 50°C

Storage Temperature Range: -40°C to +85°C

Humidity: 80% RH max. at 40°C (non-condensing)

Dimensions: 15"(38cm)W x 10"(26cm)D x 3½"(9cm)H

Dimensions (serial# 8-3637 and higher): .. 17"(43cm)W x 11½"(29.5cm)D x 4"(10cm)H

Weights: 11lbs(5kg) NET; 15lbs(7kg) SHIPPING

Weights (serial# 8-3637 and higher): 12lbs(5.5kg) NET; 16lbs(7.5kg) SHIPPING

2-5. Recommended Calibration Interval

The above accuracy specifications are valid for a period of 1 year following calibration, thus for maintenance of these specifications a calibration interval of 1 year is recommended. More frequent calibrations may be performed as desired.



SECTION III OPTIONAL EQUIPMENT



3-1. General

The 4100 series of Ohmmeters are shipped with a detachable power cord, 0.1 Ω zeroing resistor, and an Operation Manual as standard equipment. This section lists several items that may be desirable for special applications.

3-2. Accessories and Options

Option BCD: Data Output

This option provides parallel BCD data on a rear-panel 50-pin connector. All outputs are TTL compatible levels with a drive capability of 1 LS load. The outputs of Option BCD may be used to drive the Valhalla Model 1248 below. See Section 7.

Model 1248: Dual-Limit Comparator

The Valhalla Model 1248 may be used in conjunction with a 4100 Series ohmmeter and Option BCD above. The Model 1248 is a dual-limit BCD comparator that interprets the display indications of the ohmmeter as either "HI", "LO" or "GO", based on a tolerance that is set by the user. Relay contact closure is provided to trigger an alarm, counter, batch sorter or other device. The 1248 also reduces operator workload by allowing him to make an instant determination of the test results. The mating cable from the ohmmeter to the 1248 is 3' in length and designated as "IDC-2".

Options IEEE, RS232, and PAR

The Valhalla 4100 Series of ohmmeters is now available with several of the industry's most popular remote interfaces. These include a GPIB IEEE-488.2 compatible interface, a serial RS232C interface, and a Centronics parallel printer interface for direct print-out capability. The interfaces are for data acquisition only and

do not provide range or function control of the ohmmeter. The interfaces are available in any combination and may be used simultaneously. Also refer to Section 7.

Temperature Compensators

Models 4100ATC and 4150ATC may utilize a compensating sensor to provide resistance readings that have been corrected for temperature changes. Options AL and CU simulate a constant-temperature chamber referenced to either 20°C or 25°C. The temperature coefficient of Option CU is 3931ppm/°C. The temperature coefficient of Option AL is 4030ppm/°C.

Option CK: Compensator Extension Cable

This option is a shielded extender cable to allow an Option "CU" or "AL" to be mounted up to 48" away from the ohmmeter.

Option R: Rack Mount Adapter

The 4100 Series of ohmmeters may be mounted in a standard 19" equipment rack using these optional rack ears. The standard rack ears are designated as Option R1. The rack ears for ohmmeters with serial numbers 8-3637 and higher are designated as Option RX3.

3-3. Test Leads

This section details the different test lead sets and connectors available for use with the 4100 Series of ohmmeters.

Option K: Kelvin Lead Set

Option "K" is a shielded, 4-wire Kelvin cable set, forty-eight inches in length terminated in "KCS" gold-plated clips. Option "K" is the recommended general purpose lead set for most applications.

Option KCS: Gold-Plated Clips

Option "KCS" are the gold-plated Kelvin clips used on the Option "K" lead set for 4-wire measurements of smaller components and leads. Clips open to 1/2 inch and accommodate test currents of up to 10 amperes.

Option JAWS: Gold-Plated Clamps

Option "JAWS" are the heavy-duty clamps used to terminate Option "KK" below.

Option KK: Heavy-Duty Lead Set

Option "KK" is a heavy-duty 4-wire Kelvin cable set, 48-inches in length terminated in "JAWS" clamps for measuring large motors, bushings, etc. Opening is 2".

Option MP-1: Kelvin Micro-Probes

Option "MP-1" is a 48-inch shielded Kelvin 4-wire cable set with a 1-ampere test current capacity employing a set of Kelvin Micro-Probes. The probes are equipped with spring-loaded stainless steel tips with 0.05" spacing.

Option MP-2: Kelvin Mini-Probes

Option "MP-2" is a 48-inch shielded 4-wire cable set equipped with Kelvin Mini-Probes having spring-loaded stainless steel tips with 0.18" spacing.

Option MP-4/MP-5: Surface Probes

These probes permit rapid, repeatable bonding testing on a variety of screened or flat surfaces. Test current is evenly distributed through the probe base while sensing is accomplished via a spring loaded center contact. The MP-4 target area is 1" in diameter. The MP-5 target area is .4" in diameter.

Option BBL: Banana-to-Banana Cable

Option "BBL" is a 48" shielded cable terminated on both ends in dual banana plugs. This cable may be used for voltage and current connections to the ohmmeter.

Option SL-48: Low Thermal Leads


Option "SL-48" is a 48" shielded lead set terminated in gold-plated spade lugs. This lead set is designed to eliminate problems caused by thermal EMF's and is rated for the maximum output current of the instrument.

Option C: Banana-to-Clip Cable

Option "C" is a 48" general purpose shielded lead set terminated on one end in dual banana plugs and on the other end in red and black alligator clips.



SECTION IV FRONT PANEL CONTROLS

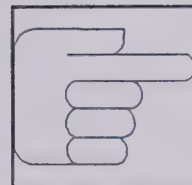

4-1. General

This section outlines the use of each of the front panel controls and connectors. This section should be used in conjunction with Sections 5 and 6 for complete operating instructions.

4-2. POWER Switch

This "push-push" switch is used to alternately apply or disconnect the AC power source from the internal circuitry of the product.

4-3. RANGE Switches

These switches are used to select the required resistance range. The switches are interlocked such that only one switch may be selected (depressed) at any one time. Use the range and resolution tables of Section 2-2 to determine which range will provide the greatest accuracy without exceeding its limit.

CAUTION!

Extra care must be taken when working with inductive loads. Always select the highest resistance range before connecting or disconnecting the test leads.

4-4. STD/T.C. Switches

These paragraphs apply only to Models 4100ATC and 4150ATC. These switches are used to select (T.C.) or deselect (STD) the temperature compensating mode of operation. These switches are interlocked such that only one may be depressed at any one time.

This switch should be left in the STD position unless a compensating sensor (Option CU or AL) is attached to the TEMPERATURE

COMPENSATOR jack.

Depress the T.C. switch to select the compensator. Selection of the ATC mode of operation when no sensor is fitted will yield invalid measurements.

4-5. Temperature Compensator Connector

These paragraphs apply only to Models 4100ATC and 4150ATC. This BNC connector may be connected to a temperature sensor (e.g., option "CU" or "AL") for operation of these products in the T.C. mode via up to 48" of RG58CU cable (Valhalla Option CK). This sensor simulates a constant temperature chamber and will accurately monitor the ambient temperature and correct the displayed reading to give the value at the reference temperature of the sensor.

To achieve the best results when using the T.C. mode of operation the user should ensure that the sensor is in the same environment as the test load, and is not in any large air currents which may cause cooling effects. The user should also note that to reduce the effects of drafts the temperature sensor has been designed with a long thermal time constant, thus at least 20 minutes should be allowed for thermal stabilization following any large change in ambient conditions or following handling of the sensor.

CAUTION!

The case of the sensor is electrically connected to internal circuitry in the ohmmeter. The sensor should have no electrical contact with the load under test.

4-6. VOLTAGE and CURRENT Terminals

The four terminals on the front panel provide full 4-wire Kelvin measurement capability. The CURRENT terminals provide the test current while the VOLTAGE terminals are used to monitor the voltage drop across the load. Refer to section 6-2.

4-7. ZERO Control

This potentiometer may be used to trim out any offset present on the display. See Section 6.

4-8. OPEN CIRCUIT VOLTAGE Switches

These paragraphs apply only to Models 4165 and 4165-1344. The OPEN CIRCUIT VOLTAGE switches are used to select the desired maximum compliance voltage of the current source. This function ensures "dry" measurements by clamping the open-circuit voltage at the CURRENT terminals. For example, if the 20mV switch is depressed the voltage at the CURRENT terminals will not exceed 20mV ($\pm 5\%$). These two switches are interlocked such that only one may be depressed at any one time.

The user should note that in some applications (where the lead resistance is not negligible) it is possible that the selected voltage may be exceeded even when connected to a low resistance load. In this event, if it is not possible to reduce the lead resistance in the current carrying leads, the user may wish to select the higher clamp voltage after connecting to the test load and then re-select the lower clamp voltage prior to the removal of the test load. This will ensure that the required voltage is not exceeded during connection or disconnection, but will allow the correct value of the test load to be obtained.

For the 4165-1344 only, the 20mV clamp should be selected prior to reversing the polarity of the test current.

4-8. Polarity Reversal Switch

These paragraphs apply to the Model 4165-1344 only. This switch allows the effects of thermal emf's to be measured and corrected for by averaging the measurements obtained on both polarities. An estimation of the thermal emf's present may be obtained by the formula:

$$thermal s = \frac{rdg A - rdg B}{2} \mu V$$

Where reading A and reading B are the readings taken in the NORMAL and REVERSE modes, disregarding the decimal point.

4-9. PRINT Switch


The PRINT switch is used by the optional parallel printer or serial RS232C interface to control data transfer. If the printer interface is installed, pressing this button will generate a print-out of the resistance data. For the RS232C option (without printer), this will send one reading to the terminal. Please refer to the appropriate addendum in Section 11 of this manual for details on interface operation.

4-10. RESISTANCE Window

This 4½ (19999 counts) LED display presents the measured resistance value. The units of measure are determined by the setting of the Range switches, and are either milliohms, ohms, or kilo-ohms. A flashing display indicates an overrange condition. In this situation the unit should be upranged to obtain a solid reading.



SECTION V REAR PANEL CONNECTORS

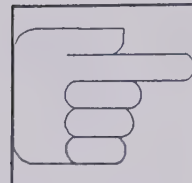

5-1. General

This section outlines the use of each of the rear panel controls and connectors. This section should be used in conjunction with Sections 4 and 6 for complete operating instructions.

5-2. Power Connector

The 3-prong power connector mounted on the rear panel of the product is for the application of AC power to the unit. Refer to section 1-3 for available voltages and safety precautions.

5-3. Fuseholder

 This item is located internally on instruments manufactured with serial numbers lower than 8-3637.

This item is used to provide access to the main power fuse. Fuse values are listed below:

105VAC - 125VAC = ¼ amp slo-blo *

210VAC - 250VAC = .125 amp slo-blo *

Replace blown fuses with their exact equivalent only!

5-4. BCD Interface


This connector is provided on units fitted with Option "BCD" and may be used to interface with the Valhalla Model 1248 Comparator, or with other types of data acquisition equipment. The individual pin functions of this connector are shown in section 7-2.

5-5. Other Interfaces

The 4100 Series is now available with a choice of three common interfaces for remote data acquisition. These include GPIB (IEEE-488.2), RS232C, or a Centronics parallel printer interface. These interfaces are for data acquisition only, and do not allow remote range control of the ohmmeter. If your ohmmeter has been fitted with one of these optional interfaces, please refer to Section 11 for operating instructions.

* Fuse values are doubled if the IEEE, RS232C or Printer interface has been installed. Refer to rear-panel markings.

SECTION VI MANUAL OPERATION

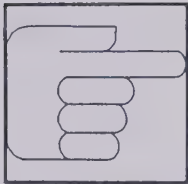

6-1. General

This section contains operating instructions for the ohmmeter Models 4100ATC, 4150ATC, 4165, and 4165-1344. The information contained in this section should be used along with the descriptions in Sections 4 and 5 to become completely familiar with the various methods of operation using the different ohmmeters.

6-2. Connections

Connections to the ohmmeter are made via 4 binding posts on the front panel of the instrument. When using Valhalla test leads, the tabbed side of each banana jack is connected to the CURRENT terminals (see below). This ensures that current is carried in the largest conductor of the cable, and that the voltage input is shielded.

HI *	* HI ←Tab
VOLTAGE	CURRENT
LO *	* LO ←Tab

NOTE: If the V_{HI} and I_{HI} terminals are not shorted together the display will roll around and may or may not indicate an overrange. This is a characteristic of the voltmeter and does not indicate a fault in the instrument.

The 4-Wire configuration of all Valhalla ohmmeters eliminates errors normally caused by test lead and contact resistances. In many applications the contact resistance can exceed the value of the load by several orders of magnitude. The 4-Wire ohmmeter bypasses this potential error source by providing two terminals of constant current and an additional two terminals for high impedance voltage measurement. The result is a fast, accurate resistance measurement of the load, independent of the resistance of the current carrying leads.

Figure 6-1 illustrates how the 4-wire principle is used to eliminate lead, wire and contact resistances as potential error sources. The internal current source inherently overcomes all series resistance (within compliance voltage limits) and delivers a precise constant current. The internal high-impedance DVM senses the voltage drop across the load. There is negligible contact and lead resistance error created by the voltage measurement because the high input impedance of the DVM limits current flow in the voltage leads.

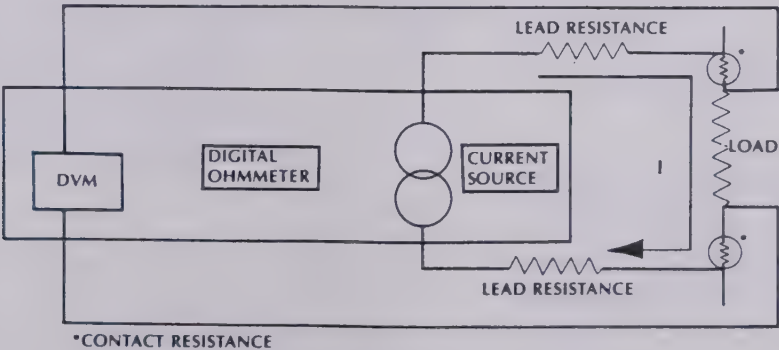


Figure 6-1. Error Sources in Resistance Measurements

6-3. 4100ATC and 4150ATC Operation

The guidelines below should be followed for taking measurements using Models 4100ATC and 4150ATC:

- 1) Connect the test leads to the ohmmeter as described in 6-2.
- 2) Select the highest resistance range (20K Ω for 4100ATC or 2K Ω for 4150ATC).
- 3) Select the STD mode unless a compensator is attached to the connector on the front panel.
- 4) **Zero Adjustment.** This adjustment may be performed at any time but does not need to be performed before each measurement. To make the adjustment, select the 200 Ω range and connect the ohmmeter to the 0.1 Ω resistor (provided). Adjust the front panel ZERO potentiometer so that the display indicates 000.10.
- 5) Connect the test leads to the load using a 4-wire configuration.
- 6) Select the most precise reading by downranging the ohmmeter until the display flashes (indicating an overrange condition) and then moving back up one range.

NOTE: It is recommended that the ohmmeter be placed in the highest resistance range (far right switch) prior to connecting or disconnecting the test leads to avoid drawing an arc.

6-4. 4165 Operation

The guidelines below should be followed for taking measurements using the Model 4165 Contact Resistance Ohmmeter:

- 1) Select the 50mV maximum open-circuit voltage. This limits the maximum voltage that will be present at the CURRENT terminals in a no load situation to ensure a dry measurement.
- 2) Select the 20K Ω range.
- 3) Connect the test leads to the ohmmeter as described in 6-2.
- 4) **Zero Adjustment.** This adjustment may be performed at any time but does not need to be performed before each measurement. To make the adjustment, select the 200 Ω range and connect the ohmmeter to the 0.1 Ω resistor (provided). Adjust the front panel ZERO potentiometer so that the display indicates 000.10.
- 5) Connect the test leads to the load using a 4-wire configuration.
- 6) Select the most precise reading by downranging the ohmmeter until the display flashes (indicating an overrange condition) and then moving back up one range.
- 7) Select the 2V clamp. The resistance reading will be indicated on the display. It is recommended that the OPEN-CIRCUIT VOLTAGE selector be placed in the 50mV position before changing ranges or (dis)connecting the test leads.



6-5. 4165-1344 Operation

The guidelines below should be followed for taking measurements using the Model 4165-1344 Contact Resistance Ohmmeter:

- 1) Select the 20mV maximum open-circuit voltage. This switch limits the maximum voltage that will be present at the CURRENT terminals in a no load situation to ensure a dry measurement.
- 2) Select the 20K Ω range.
- 3) Connect the test leads to the ohmmeter as described in 6-2.
- 4) **Zero Adjustment.** This adjustment may be performed at any time but does not need to be performed before each measurement. To make the adjustment, select the 200 Ω range and connect the ohmmeter to the 0.1 Ω resistor (provided). Adjust the front panel ZERO potentiometer so that the display indicates 000.10.
- 5) Connect the test leads to the load using a 4-wire configuration.
- 6) Select the most precise reading by downranging the ohmmeter for maximum resolution.
- 7) Select the 2V clamp. The resistance reading will be indicated on the display.
- 8) Note the reading on the display and reselect the 20mV clamp.
- 9) Reverse the polarity switch and reselect the 2V clamp.

- 10) Note the reading on the display. The true-ohms value is calculated by averaging the two noted readings together.

- 11) It is recommended that the OPEN-CIRCUIT VOLTAGE selector be placed in the 20mV position before changing ranges or (dis)connecting the test leads.

6-6. Temperature Compensation

Automatic Temperature Compensation (ATC) simulates a constant ambient temperature chamber for materials which are normally subject to varying ambient temperatures. When the ATC mode is selected, the temperature sensor (Options "AL" and "CU") automatically senses the ambient temperature and adjusts the reading to indicate what the actual resistance value would be in a controlled 20°C or 25°C environment. The Option "CU" compensator simulates the coefficient of copper while Option "AL" simulates aluminum.

The ATC mode is selected by pressing the T.C. push-button. The temperature sensors are connected to the ohmmeter via the front panel BNC connector. The temperature sensor may be placed in closer proximity to the device under test using a Valhalla Option "CK" compensator extension cable. Selecting the T.C. mode with no sensor connected will yield invalid measurements.

CAUTION!

The case of the sensor is electrically connected to internal circuitry in the ohmmeter. The sensor should have no electrical contact with the load under test.



SECTION VII INTERFACE OPERATION



7-1. General

The 4100 Series of ohmmeters is now available with a choice of two data outputs. The standard output provides data in a binary-coded-decimal format. The latest data output available is a parallel printer port for connecting directly to a Centronics compatible printer. Both interfaces are described below.

7-2. BCD Interface

Option BCD has a rear mounted 50 pin Amphenol connector providing data in a parallel binary-coded-decimal (BCD) format. The outputs are TTL compatible and may drive 1 LS load. The summary of pin functions is provided below and on the schematic number 2053-076 at the back of this manual.

<u>Pin Number</u>	<u>Data</u>
1	1
2	2
3	4
4	8
6	10
7	20
8	40
9	80
11	100
12	200
13	400
14	800
16	1000
17	2000
18	4000
19	8000
21	10000
22, 40	20000 (overrange)
26	+ 5 VDC supply
50	0 VDC common

The BCD outputs are fully compatible with the Valhalla Model 1248 BCD Comparator. When connecting to the comparator using the standard IDC-2 interface cable, the end of the cable possessing the wire break-outs is connected to the Model 1248.

7-3. Other Interfaces


The 4100 Series is now available with your choice of three common interfaces for remote data acquisition. These include GPIB (IEEE-488.2), RS-232C, and a Centronics parallel printer interface. These interfaces are for data acquisition only, and do not allow remote range control of the ohmmeter.

The Centronics print-out option allows the ohmmeter to be connected to a variety of standard printer types. The print-out style may be configured in a label format to include company name, model number, serial number, time, date, test number and the measured data.

If your ohmmeter has been fitted with one of these optional interfaces, please refer to Section 11 for operating instructions.

- 35 End of Conversion on negative transition
 (A high signifies "Busy")
- 45 Display Hold Line
 (+5V or open = Run; 0V = Hold)

SECTION VIII ROUTINE MAINTENANCE

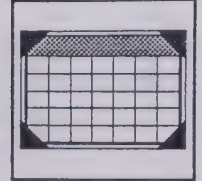

8-1. General

This section provides general maintenance information and a procedure for calibrating the ohmmeter. The Model 4100 Series ohmmeters should be calibrated on a routine basis (every 12 months is recommended) to ensure continued accuracy.

Before performing the calibration procedure below, the ohmmeter should be allowed to warm up at a stable temperature for at least 30 minutes with the covers in place.

8-2. Required Test Equipment

The following equipment is required to perform calibration of the product:

- 1) Precision Resistors with known values to within $\pm 0.005\%$, having the following values: $0.01\Omega^{[1]}$, $0.1\Omega^{[1]}$, $1.0\Omega^{[1]}$, $10\Omega^{[1]}$, $100\Omega^{[1][2]}$, $1K\Omega^{[2]}$ and $10K\Omega^{[2]}$

[1] May be replaced by Valhalla Model 2575A.

[2] May be replaced by Valhalla Model 2724A.

- 2) DC Voltage source with available outputs of 0 to 200mV $\pm 2\mu V$ (Valhalla Model 2701C)
- 3) Four-terminal test lead set (Valhalla Option "K" or Option "C")
- 4) *For 4165 & 4165-1344 only:*
a voltmeter capable of measuring 20mV within $\pm 1mV$, 50mV within $\pm 5mV$, and 2V within $\pm 10mV$.

Note: If this equipment is not available, the ohmmeter may be returned to Valhalla Scientific for calibration traceable to NIST.

8-3. Calibration Procedure

The calibration adjustments are accessed by removing the top cover of the instrument. If the ohmmeter has been fitted with any of the optional interfaces (IEEE, RS232C, or printer), the blue interface PCB will cover the adjustments. This installation has been designed to facilitate calibration by using hinged stand-offs to allow access to adjustments. To enable this board to tilt upward, remove only the black screw in the rear corner of the interface PCB. Replace this screw when finished with calibration.

The locations of the adjustment potentiometers are shown on the drawing number 4100-600 at the back of this manual. Leave the cover in place as much as possible. After each adjustment is made, the cover should be replaced and the instrument allowed to restabilize.

CAUTION!

Dangerous AC line voltages exist inside the instrument. Use caution when making adjustments to avoid contact with these voltages.

8-3-1. Voltage Zero Adjustment

- 1) Connect the voltage standard (2701C) at 0 volts to the VOLTAGE HI and LO terminals.
- 2) Select the 200 Ω range and the STD mode. For 4165 and 4165-1344 select the 2V clamp and NORMAL polarity.
- 3) Adjust the front panel ZERO potentiometer so that the display indicates 000.00.

8-3-2. Voltage Fullscale Adjustment

- 1) Set the 2701C to output 100mV for 4100ATC or 10mV for all others. The ohmmeter uses negative voltages therefore the VOLTAGE HI terminal should be negative with respect to the VOLTAGE LO terminal.
- 2) Adjust RV101 for a display indication of 100.00.
- 3) Remove all connections to the terminals.

8-3-3. Current Zero Adjustment

- 1) Using the 4-wire test leads, connect the input terminals of the ohmmeter to the 0.1 ohm standard resistor and select the 200 Ω range.
- 2) Adjust the front panel ZERO potentiometer for a display indication of 000.10 ohms ± 1 digit.

8-3-4. 20m Ω Range Adjustment

 This adjustment applies only to Model 4150ATC. All other instruments skip to step 8-3-5.

- 1) Connect the 4150ATC to the 0.01 ohm standard resistor and select the 20m Ω range.
- 2) Adjust R60 for a display indication of 10.000 ± 2 digits.

8-3-5. 200m Ω /.2 Ω Range Adjustment

- 1) Connect the ohmmeter to the 0.1 ohm standard resistor and select the 200m Ω /.2 Ω range.
- 2) 4150ATC only : Adjust R64 for a display indication of 100.00 ± 2 digits.
- 3) Other than 4150ATC : Adjust R60 for a display indication of .10000 ± 2 digits.

8-3-6. 2 Ω Range Adjustment

- 1) Connect the ohmmeter to the 1 ohm standard resistor and select the 2 Ω range.
- 2) Adjust R66 (4150ATC) or R64 (all others) for a display indication of 1.0000 ± 2 digits.

8-3-7. 20 Ω Range Adjustment

- 1) Connect the ohmmeter to the 10 ohm standard resistor and select the 20 Ω range.
- 2) Adjust R70 (4150ATC) or R66 (all others) for a display indication of 10.000 ± 2 digits.

8-3-8. 200 Ω Range Adjustment

- 1) Connect the ohmmeter to the 100 ohm standard resistor and select the 200 Ω range.
- 2) Adjust R74 (4150ATC) or R70 (all others) for a display indication of 100.00 ± 2 digits.

8-3-9. 2K Ω Range Adjustment

- 1) Connect the ohmmeter to the 1Kohm standard resistor and select the 2K Ω range.
- 2) Adjust R76 (4150ATC) or R74 (all others) for a display indication of 1.0000 ± 2 digits.

End calibration for 4150ATC. ■

8-3-10. 20K Ω Range Adjustment

- 1) Connect the ohmmeter to the 10Kohm standard resistor and select the 20K Ω range.
- 2) Adjust R76 for a display indication of 10.000 ± 2 digits.

End calibration for 4100ATC. ■

8-3-11. Voltage Clamp Adjustments

■ The following steps apply only to Models 4165 and 4165-1344.

- 1) Connect the ohmmeter to the 10Kohm standard resistor and select the 2K Ω range (the display will flash indicating an overrange condition).
- 2) Attach the voltmeter between the CURRENT HI and LO terminals.
- 3) Select the 20mV (4165-1344) or 50mV (4165) open-circuit clamp.
- 4) Adjust the "50mV" potentiometer on the clamp PCB for a voltmeter reading of 20mV (4165-1344) or 50mV (4165) $\pm 1\text{mV}$.
- 5) Select the 2V open circuit clamp.
- 6) Adjust the "2V" potentiometer on the clamp PCB for a voltmeter reading of 2V $\pm 10\text{mV}$.

End calibration for 4165 and 4165-1344. ■

8-4. Periodic Maintenance

The 4100 Series of ohmmeters do not require any periodic maintenance other than an occasional cleaning of the exterior surfaces of the product and routine performance of the calibration procedure.

Loose dirt or dust which may have collected on the exterior surface of the ohmmeter may be removed with a soft cloth or brush. Any remaining dirt may be removed with a soft cloth dampened in a mild soap and water solution. **Do not use abrasive cleaners on the ohmmeter!**

The front panel may be cleaned with a soft cloth and a "Windex" type cleaner if required. **Do not use petroleum based cleaners on the front panel.**

If required, the interior of the product may be cleaned out by blowing with dry compressed air.

If the product has become heavily soiled with dirt or other contaminants it is recommended that the unit be completely overhauled. Contact your local Valhalla Scientific Service Center for details.



SECTION IX THEORY OF OPERATION



9-1. Troubleshooting

Apparent malfunctions are often the result of misinterpretation of specifications or due to an incomplete understanding of the instrument. **A thorough review of the operating instructions for this instrument is recommended prior to any component replacement.** Check to be sure that cables and other test equipment are in good working order before attempting to troubleshoot the ohmmeter.

If the ohmmeter exhibits problems that cannot be eliminated by reviewing the operating instructions, the following guidelines have been established to help solve the problem.

9-1-1. Localizing the Problem

The key to successful troubleshooting is to localize the problem as much as possible before trying to pin the problem down to a specific component. Certain questions should be asked such as "Does the problem occur on all ranges or on a specific range only?". The power supplies are also one of the first things that should be checked.

As it is not possible to anticipate all failure modes of the ohmmeter, servicing personnel should become familiar with this section of the manual to gain a complete understanding of the internal workings of this instrument.

9-1-2. Component Replacement

If the problem has been identified as a faulty component, the accuracy of the ohmmeter can be maintained only if the following precautions are taken:

- ▲ Use only the specified replacement component or its

exact equivalent.

Spare parts can be ordered from your nearest Valhalla Scientific Service Center or from the factory directly by referring to the Valhalla Stock Number listed in the Parts Lists section at the back of this manual.

- ▲ Use only 63/37 grade rosin core electronic grade solder with a 50W or lower maximum power soldering iron.
- ▲ When soldering, heat the terminal of the component, *not* the solder. Apply solder smoothly and evenly. Do not move the component until the solder has cooled. **Bad solder joints can cause additional problems!**
- ▲ Static sensitive parts require special handling procedures. Always treat an unknown part as if it were static sensitive.

9-2. General Circuit Descriptions

The ohmmeter may be easily thought of as consisting of two separate parts.

- 1) A constant-current source. This half of the ohmmeter provides a stable test current that is passed through the load to develop a voltage across it. The value of this current for each range is indicated on the front panel of the instrument.
- 2) A digital voltmeter (analog-to-digital converter). The voltmeter senses the voltage drop across the load and translates this into the resistance reading on the display.

Use the following guidelines to determine whether the fault lies in the voltmeter or current source circuitry of the ohmmeter:

- 1) If the fault occurs on one range only then the fault is probably in the current source section.
- 2) If the fault is display related (e.g., missing segments, non-numeric data, etc.) then the fault is probably in the voltage measurement section.
- 3) If the fault occurs on all ranges, the voltmeter section may be verified as operational by applying a precise -100mV (4100ATC) or -10mV (all others) to the VOLTAGE terminals. The display should indicate 10000 counts no matter which resistance range is selected.

9-3. Detailed Circuit Descriptions

This series of paragraphs detail the actual operation of the above mentioned circuits, and are provided to aid the technician in troubleshooting to component level. A basic knowledge of electronics is assumed. The technician should refer to the schematics at the back of this manual.

9-4. Power Supplies

The ohmmeter uses several supplies to power the current source, the voltmeter (A-to-D converter) and any optional interfaces. All of these supplies are similar in design. A secondary winding of the transformer provides the basic AC voltage from which the DC supply will be produced. This AC voltage is rectified using diodes, filtered using electrolytic and tantalum capacitors, and in some cases regulated using a standard three-pin regulator.

The supplies are shown on the schematic 4100-074 sheet 1 (and sheet 2 for the optional unregulated +5V supply). The 4150ATC and

4165 models use additional supplies for their preamplifier, shown on sheet 2.

9-5. Constant-Current Source

The constant-current source provides the stable current necessary to generate the precise voltage drop across the load. The design of the current source compensates for all series resistance (within compliance voltage limits) to overcome the effects of test lead and contact resistances.

9-5-1. Reference Generator

The reference generator is shown on the drawing 4100-074 sheet 2. The precise voltages required by the A-to-D converter and the current source are provided by the zener reference IC106. IC106 and its associated components produce a nominal 6.95V. This voltage is attenuated by the resistors R111 through R115 and RV101 to provide the required 100mVDC reference voltage to the A-to-D converter. RV102 is used to adjust the reference voltage to the current source. In the ATC mode (4100ATC and 4150ATC only) the resistor formed by R114 and R119 is replaced by the temperature compensator to provide the required corrections for temperature variations.

9-5-2. Reference Inverter Stage

The reference inverter is shown on drawing 4100-074 sheet 1. IC11 and its associated components form an amplifier stage having a gain of -1. This stage is used to convert the +1VDC reference voltage to a negative polarity.

9-5-3. Differential Amplifier

The differential amplifier is shown on drawing number 4100-074 sheet 1. IC12 and its associated components form a unity gain differential amplifier. The output of the Reference Inverter stage (V_{ref}) and the



output of the Output Amplifier (V_{out}) form the inputs to this amplifier. The output voltage from this amplifier is thus given by ($V_{out}-V_{ref}$).

9-5-4. Output Amplifier

The output amplifier is shown of drawing number 4100-074 sheet 1. IC13, Q18, Q20 and the range resistors R60 through R76 combine to form the output amplifier of the current source. The range resistors determine the value of the output current. The voltage drop across these resistors (V_{out}) is used as an input to the Differential Amplifier to provide error correction and to compensate for varying loads.

9-5-5. Output Voltage Clamp

This additional PCB is only fitted in Models 4165 and 4165-1344 and is shown on schematic 4165-070. The operation of this circuit is as follows:

- 1) IC2, IC3, R3 and R4 form a reference circuit providing -2.5V.
- 2) R5 through R9 provide divided voltages from this -2.5V reference with outputs at -2.0V and -50mV (for 4165) or -2.0V and -20mV (for 4165-1344). The selected output of this divider is connected to one input of the comparator formed by IC1, the other input of which is the voltage on the CURRENT HI terminal. The output of this comparator is used to turn off the output stage of the current source when the selected open-circuit voltage limit is exceeded.

9-6. Analog-to-Digital Convertor

The A-to-D convertor is basically a high-impedance voltmeter that is used to measure the voltage drop across the unknown load. This voltage is converted to digital form to represent the resistance value of the load.

The A-to-D convertor circuitry is shown in the drawing number 4100-074 sheet 2.

9-6-1. A-to-D Convertor

The A-to-D conversion is performed by the IC pair IC103-IC104 and their associated components. IC103 is the digital portion of the convertor and IC104 is the analog portion. The required reference voltage was discussed in Section 9-5-1 and is generated by IC106. IC102 is used to demultiplex the digital outputs of the convertor and to condition it for use by the display LEDs DS1-DS5.

9-6-2. Preamplifier

Ohmmeter Models 4150ATC, 4165, and 4165-1344 use a preamplifier stage consisting of IC101 and its associated components to boost the voltage input to the A-to-D convertor up to the required levels. The preamplifier is a chopper stabilized x10 amplifier. This stage raises the 20mV fullscale test voltage of these instruments up to the 200mV fullscale voltage required by the A-to-D convertor.

9-7. Optional Interfaces

The BCD interface takes multiplexed digital information from the voltmeter and converts it to a parallel BCD 8-4-2-1 code that is easier to work with. This circuitry is shown on drawing number 2053-076 at the back of this manual.

The other interfaces (IEEE, RS232C, and printer) are made possible by Valhalla's 1020 Smart Interface Board. The 1020 takes range information from contacts of the range switches and digital data from the voltmeter. It decodes this information and makes it available at any of four ports. A complete description of the operation of this interface is beyond the scope of this manual. Please contact Valhalla Scientific if problems are encountered.



SECTION X SPECIAL PROCEDURES



10-1. Noisy Readings

In general, noisy readings are caused by poor connections either to the input terminals or to the test load. If noisy readings are encountered, check these connections first.

10-1-1. Inductive Loads

The measurement of highly inductive loads (such as large transformers) may also yield noisy readings. This is due to the very high impedance to line voltage exhibited by the load causing an excessive amount of noise pick-up. This effect can be significantly reduced by using fully shielded cables. It may also be helpful (and will cause the settling time to be reduced) if the unused windings on transformers being tested can be short-circuited during the measurement. This will significantly reduce the inductance of the winding under test and will also prevent these windings from producing dangerous voltages during connection and disconnection of the ohmmeter.

10-1-2. Drifting Displays

All Valhalla ohmmeters use a high impedance voltmeter as part of the resistance measurement process. This voltmeter is a highly accurate and stable 4½ digit analog-to-digital converter (A to D). Unless it is receiving a definite input signal, the output display of this A to D is ambiguous. The display may indicate a randomly wandering number, or it may flash indicating an overrange condition. This unpredictable display may make it seem to appear that the instrument is experiencing some sort of malfunction. It is, in fact, just a characteristic of the voltmeter circuit and should not be mistaken for a fault in the instrument.

The display indications should be ignored unless there is a definite measurement being taken. If this wandering display is not acceptable, the ohmmeter can be made to indicate an overrange condition whenever the terminals are opened either by using a 4-wire Kelvin type lead set (Valhalla Option "K") or by shorting the V_{HI} and I_{HI} terminals together.

The display should indicate a stable reading when the test leads are securely attached to the device under test. If the display appears to be erroneous when connected to a load, recheck the test leads for integrity and cleanliness. If all external items appear to be functioning properly, the problem may be the ohmmeter. In this case, please call the factory.

10-2. Connecting to Inductive Loads

The measurement of inductive loads (transformers, ballasts, coils, magnets, chokes, etc.) requires that special precautions be taken in order to ensure safety and maximize performance. Other than the noise considerations mentioned in 10-1-1 above, the following items should be noted:

- 1) Prior to connecting the unit to the load, select the highest (rightmost RANGE switch) range possible.
- 2) Settling times for inductive loads are greater than those of resistive loads. A stable reading generally indicates that the inductor has been fully charged and an accurate measurement is being taken.

- 3) Prior to disconnecting the load, select the highest resistance range and wait for the display to show a stable reading indicating that the inductor has been discharged. This reduces the possibility of drawing an arc which may cause injury to the operator and/or damage the instrument.




SECTION XI MANUAL CHANGES AND ADDENDUMS



Immediately following this page may be found any notices regarding manual changes, or operating instructions for the optional interfaces (if installed). Please refer to any applicable material before attempting to operate your ohmmeter. If no items follow this page, your manual is complete as printed.

SECTION XII PARTS LISTS

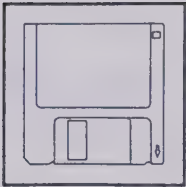

The following parts lists have been included in this manual:

4100-600	3 pages	4100ATC Main Board Assembly
4150-600	4 pages	4150ATC Main Board Assembly
4100-400	1 page	Final Assembly
4100-601	1 page	4100/4150 Display Board Assembly
4165-600	1 page	4165 Clamp PCB Assembly
4165-402	4 pages	4165-1344 Main Board Assembly
4165-601	1 page	4165-1344 Clamp PCB Assembly
4100-407	1 page	Option BCD Interface Assembly

REF.DES.	STOCK #	QUANTITY	DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A T N			
2	04-30012	1	4100 Series Main Board	DWG 4100-700	
5	80-02220	22	20awg Wire, Red TFE	M16878/4-BGE-2	
6	70-00003	10	3/16" Black Shrink Tubing	3000187 BLK 3M	
7	99-06000	4	#6 18-22awg Ring Lug (Red)	PANDUIT PV18-6R	
8	05-10019	5	Cable tie, 4"x 1/8"	Panduit WRN-4	
9	05-10903	1	Heatsink, Wave Solder, 1" High (TO-3) .062 Bd	AAVID 568203B00600	
12	05-10006	2	Chassis fastener, swage, 1/4sq, 4-40	Usecro B1591B	
13	05-10838	1	Heatsink, TO-220, Black Anodize	AAVID #576802B04000	
15	80-00014	5	14awg Bus Wire	ANIXTER 1BB-1401	
20	90-04003	2	#4-40 x 3/16" Phil Pan S.S.		
21	96-00043	2	#6-32 x 9/16" Phil Pan Zinc Plated		
23	90-06006	1	#6-32 x 3/8" Phil Pan S.S.		
26	90-06004	1	#6-32 x 1/4" Phil Pan S.S.		
27	98-04002	2	#4 Internal Star Washer S.S.		
28	98-06002	4	#6 Internal Star Washer, S.S.		
30	97-06001	1	#6-32 Hex Nut, Small Pattern, Stainless-Steel		
36	05-10073	10	Knob, black, rectangular	Centralab B304-BLK	
37	80-02020	20	20awg Wire, Black TFE	M16878/4-BGE-0	
61	05-10530	1	Solder lug, internal star, #4	Smith 1412-4	
64	99-99009	1	THREADLOCK MEDIUM	Loctite 222	
C4	02-60003	1	1uF 100V Mylar	Illinois 105MSR250K	
C11	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C12	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C13	02-40001	1	220uF 25V Aluminum Axial	Illinois 227TTA025M	
C14	02-40001	1	220uF 25V Aluminum Axial	Illinois 227TTA025M	
C15	02-10005	1	50pF 500V Ceramic disc	Illinois 500BCR050K	02-20002
C16	02-60002	1	0.1uF 250V Mylar	Illinois 104MSR250K	
C17	02-10002	1	500pF 100V Ceramic Disc	SPRAGUE 56AT50	
C18	02-40000	1	4700uF 16V Aluminum Axial	Illinois 478TTA016	
C19	02-40000	1	4700uF 16V Aluminum Axial	Illinois 478TTA016	
C20	02-10009	1	0.001uF 50V Ceramic Disc	NIC NCD102KIVX5P	
C25	02-60001	1	0.22uF 100V Mylar	Illinois 224SHR100K75CE	
C27	02-30004	1	1uF 25V Tantalum Bead	Kemet T350A105K025AS	
C60	02-20013	1	100pF 500V Mica	CM05FD101J03	
C61	02-10014	1	0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C62	02-10014	1	0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C63	02-40000	1	4700uF 16V Aluminum Axial	Illinois 478TTA016	
C64	02-30004	1	1uF 25V Tantalum Bead	Kemet T350A105K025AS	
C65	02-30002	1	33uF 10V Tantalum Bead	IDC336K010NLF	
CR3	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR4	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR5	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR6	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR7	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR8	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR9	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
C104	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C105	02-90006	1	1uF 5% 50V Polycarbonate	IMB RA20105J	
C106	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C107	02-50000	1	0.22uF 10% 50V Polystyrene	IMB PA2A224K	
C108	02-30006	1	0.47uF 35V Tantalum Bead	TAP474K035SP	

REF.DES.	STOCK #	QUANTITY			DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A	T	N			
C109	02-60002	1			0.1uF 250V Mylar	Illinois 104MSR250K	
CR10	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR11	03-20048	1			Rectifier, Schottkey	Motorola 1N5818	
CR12	03-20048	1			Rectifier, Schottkey	Motorola 1N5818	
CR13	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR14	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR15	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
D106	03-20000	1			Diode, general purpose	1N4148 or 1N914	
D107	03-20000	1			Diode, general purpose	1N4148 or 1N914	
D108	03-20000	1			Diode, general purpose	1N4148 or 1N914	
IC11	03-30013	1			Op-Amp, General Purpose, Uncompensated	LM301AH or LM301AN	
IC12	03-30017	1			Op-Amp, Uncompensated	LM308H	
IC13	03-30017	1			Op-Amp, Uncompensated	LM308H	
IC14	03-30015	1			Regulator, +12V, 0.5A, TO202 or TO220	78M12CP	
IC15	03-30015	1			Regulator, +12V, 0.5A, TO202 or TO220	78M12CP	
IC16	03-30638	1			Regulator, 1A, Low Dropout, +5V	National LM2940CT-5.0	
IC102	03-30016	1			BCD to 7-Segment Decoder/LED Driver	7447AN	
IC103	03-30114		1		A to D convertor (digital portion)	Intersil ICL71C03ACPI or equiv.	
IC104	03-30113		1		A to D Convertor (analog portion)	Intersil ICL8068ACPD or equiv.	
IC105	05-02007	1			Programmable Osc., 8.3Hz-1MHz	Statek, PX01000KHzA	
IC106	03-30122	1			6.95V 1% Precision reference	National or Lin. Tech. LM399H or AH	
PL1	05-10372	2			Wafer, 6 pin, gold, 0.10 Sp, 0.56 Lg	Molex 22-10-2061	
PL2	05-10817	1			Header, 2 Pin, Straight, .1"sp, Gold, Locking	Molex 22-11-2022	
Q7	03-10003	1			NPN Darlington Transistor (TO92)	2N5172	
Q10	03-10003	1			NPN Darlington Transistor (TO92)	2N5172	
Q12	03-10003	1			NPN Darlington Transistor (TO92)	2N5172	
Q14	03-10003	1			NPN Darlington Transistor (TO92)	2N5172	
Q16	03-10003	1			NPN Darlington Transistor (TO92)	2N5172	
Q18	03-10014	1			NPN Darlington (TO92)	2N5305	
Q20	03-10037	1			NPN Darlington (TO3)	2N6282	
R23	01-01015	1			47 5% 1/4W Carbon Film	RC07GF470J	
R24	01-01015	1			47 5% 1/4W Carbon Film	RC07GF470J	
R25	01-01015	1			47 5% 1/4W Carbon Film	RC07GF470J	
R26	01-01015	1			47 5% 1/4W Carbon Film	RC07GF470J	
R30	01-01110	1			3.9M 5% 1/4W Carbon Film	RC07GF395J	
R31	01-50001	1			50K End Adjust (wide)	Beckman 89XR50K	
R33	01-01063	1			15K 5% 1/4W Carbon Film	RC07GF153J	
R39	01-01043	1			1.5K 5% 1/4W Carbon Film	RC07GF152J	
R49	01-10000		1		Factory Select Resistor	RN60C???	
R50	01-10000		1		Factory Select Resistor	RN60C???	
R51	01-20015	1			591.45K 0.05% 2ppm/C Wire Wound	Goldstar GS711-591K45-.05%-2PPM	
R52	01-20017	1			100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R53	01-01073	1			47K 5% 1/4W Carbon Film	RC07GF473J	
R54	01-01045	1			2K 5% 1/4W Carbon Film	RC07GF202J	
R55	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J	
R56	01-20017	1			100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R57	01-20017	1			100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R58	01-20017	1			100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R59	01-20017	1			100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R60	01-50014	1			100 Top Adjust	Beckman 68WR100ohm	
R61	01-10032	1			69.8 1% 50ppm/C 1/4W Metal Film	RN60C69R8F	

REF.DES.	STOCK #	QUANTITY			DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A	T	N			
R62	01-20022	1			1.01 0.1% 10ppm/C Wire Wound	Goldstar R0001 (Block)	
R63	01-20025	1			9.09 0.05% 5ppm/C wire wound	Goldstar GS810-9R09-.05%-5ppm	
R64	01-50013	1			1K Top Adjust	Beckman 68WR1K	
R65	01-10031	1			634 1% 50ppm/C 1/4W Metal Film	RN60C6340F	
R66	01-50012	1			10K Top Adjust	Beckman 68WR10K	
R67	01-10033	1			6.34K 1% 50ppm/C 1/4W Metal Film	RN60C6341F	
R68	01-20029	1			90.9 0.05% 5ppm/C wire wound	Goldstar GS809-90R9-.05%-5ppm	
R69	01-20012	1			897.25 0.05% 5ppm/C Wire Wound	Goldstar GS805-897R25-.05%-5PPM	
R70	01-50018	1			10 Top Adjust	Beckman 68WR10ohm	
R71	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J	
R72	01-30001	1			1 20% 8W power wire wound	Ohmite 1500 Brown Devil	
R73	01-20011	1			8.9725K 0.05% 5ppm/C Wire Wound	Goldstar GS805-8.9725K-.05%-5PPM	
R74	01-50014	1			100 Top Adjust	Beckman 68WR100ohm	
R75	01-20010	1			89.725K 0.05% 5ppm/C Wire Wound	Goldstar GS805-89.725K-0.05%-5PPM	
R76	01-50013	1			1K Top Adjust	Beckman 68WR1K	
R77	01-01041	1			1K 5% 1/4W Carbon Film	RC07GF102J	
R78	01-01061	1			10K 5% 1/4W Carbon Film	RC07GF103J	
R79	01-01061	1			10K 5% 1/4W Carbon Film	RC07GF103J	
R80	01-01061	1			10K 5% 1/4W Carbon Film	RC07GF103J	
R81	01-01061	1			10K 5% 1/4W Carbon Film	RC07GF103J	
R82	01-01061	1			10K 5% 1/4W Carbon Film	RC07GF103J	
R100	01-01041	1			1K 5% 1/4W Carbon Film	RC07GF102J	
R104	01-01041	1			1K 5% 1/4W Carbon Film	RC07GF102J	
R105	01-01021	1			100 5% 1/4W Carbon Film	RC07GF101J	
R106	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J	
R107	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J	
R108	01-01061	1			10K 5% 1/4W Carbon Film	RC07GF103J	
R109	01-01070	1			33K 5% 1/4W Carbon Film	RC07GF333J	
R110	01-01083	1			150K 5% 1/4W Carbon Film	RC07GF154J	
R111	01-10000			1	Factory Select Resistor	RN60C???	
R112	01-10269	1			66.5K 1% 50ppm/C 1/4W Metal Film	RN60C6652F	
R113	01-20002	1			9 0.05% 5ppm/C Wire Wound	Goldstar GS810-.05%-5PPM	
R114	01-01001	1			1.0 5% 1/4W Carbon Film	RC07GF1R0J	
R115	01-10000			1	Factory Select Resistor	RN60C???	
R116	01-10061	1			4.99K 1% 50ppm/C 1/4W Metal Film	RN60C4991F	
R117	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J	
R118	01-10000			1	Factory Select Resistor	RN60C???	
R119	01-20149	1			1K .05% 5ppm/C Wire Wound	Goldstar GS602-1K-.05%-5ppm	
RN101	01-40004	1			8 x 47 Network	A-B 316B-470	
RV101	01-50000	1			100 Single Turn	CTS X201R101	
RV102	01-50015	1			2.5K Single Turn	CTS X201R252	
S1	05-03022	1			Switch,6Sta.,8Pole,Int-lock	Centralab,78354-3	
S2	05-03023	1			Switch,2Sta.,4Pole,Int-Lock	Centralab,78354-4	
S3	05-03003	1			Switch, DPDT, Push-Push	Centralab 004184	
S4	05-03003	1			Switch, DPDT, Push-Push	Centralab 004184	
SK103	05-10295	1			Socket, dil, 28 pin	Burndy DILB28P-108	
SK104	05-10041	1			Socket, dil, 14 pin	Burndy 8514-01	
T2	04-20088	1			Power Transformer	DWG 4100-012	

REF.DES.	STOCK #	QUANTITY			DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A	T	N			
2	04-30012	1			4100 Series Main Board	DWG 4100-700	
3	80-00022	5			22AWG Bus Wire	1BB-2201 ANIXTER	
4	70-11022	3			22AWG TFE Sleeving	ATC TPT 22	
5	80-02220	22			20awg Wire, Red TFE	M16878/4-BGE-2	
6	70-00003	10			3/16" Black Shrink Tubing	3000187 BLK 3M	
7	99-06000	4			#6 18-22awg Ring Lug (Red)	PANDUIT PV18-6R	
8	05-10019	5			Cable tie, 4"x 1/8"	Panduit WRN-4	
9	05-10903	1			Heatsink, Wave Solder, 1" High (TO-3) .062 Bd	AAVID 568203B00600	
10	70-00002	1			1/8" Black Shrink Tubing FP301	3M 3000125BK	
12	05-10006	2			Chassis fastener, swage, 1/4sq, 4-40	Usec0 B1591B	
13	05-10838	1			Heatsink, TO-220, Black Anodize	AAVID #576802B04000	
15	80-00014	5			14awg Bus Wire	ANIXTER 1BB-1401	
20	90-04003	2			#4-40 x 3/16" Phil Pan S.S.		
21	96-00043	2			#6-32 x 9/16" Phil Pan Zinc Plated		
23	90-06006	1			#6-32 x 3/8" Phil Pan S.S.		
26	90-06004	1			#6-32 x 1/4" Phil Pan S.S.		
28	98-06002	4			#6 Internal Star Washer, S.S.		
30	97-06001	1			#6-32 Hex Nut, Small Pattern, Stainless-Steel		
36	05-10073	10			Knob, black, rectangular	Centralab B304-BLK	
37	80-02022	20			22AWG Wire, Black TFE	M16878/4-BPE-0	
61	05-10530	1			Solder lug, internal star, #4	Smith 1412-4	
64	99-99009			1	THREADLOCK MEDIUM	Loctite 222	
C4	02-60003	1			1uF 100V Mylar	Illinois 105MSR250K	
C11	02-30001	1			10uF 25V Tantalum Bead	AVX TAP106K025SP	
C12	02-30001	1			10uF 25V Tantalum Bead	AVX TAP106K025SP	
C13	02-40001	1			220uF 25V Aluminum Axial	Illinois 227TTA025M	
C14	02-40001	1			220uF 25V Aluminum Axial	Illinois 227TTA025M	
C15	02-10005	1			50pF 500V Ceramic disc	Illinois 500BCR050K	02-20002
C16	02-60002	1			0.1uF 250V Mylar	Illinois 104MSR250K	
C17	02-10002	1			500pF 100V Ceramic Disc	SPRAGUE 56AT50	
C18	02-40000	1			4700uF 16V Aluminum Axial	Illinois 478TTA016	
C19	02-40000	1			4700uF 16V Aluminum Axial	Illinois 478TTA016	
C20	02-10009	1			0.001uF 50V Ceramic Disc	NIC MCD102KIVX5P	
C25	02-60001	1			0.22uF 100V Mylar	Illinois 224SHR100K75CE	
C27	02-30004	1			1uF 25V Tantalum Bead	Kemet T350A105K025AS	
C60	02-20013	1			100pF 500V Mica	CM05FD101J03	
C61	02-10014	1			0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C62	02-10014	1			0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C63	02-40000	1			4700uF 16V Aluminum Axial	Illinois 478TTA016	
C64	02-30004	1			1uF 25V Tantalum Bead	Kemet T350A105K025AS	
C65	02-30002	1			33uF 10V Tantalum Bead	IDC336K010NLF	
CR3	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR4	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR5	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR6	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR7	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR8	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR9	03-20002	1			Diode, rectifier, 1A, 50V	1N4001-1N4007	
C101	02-90006	1			1uF 5 1/2 50V Polycarbonate	TMB RA20105J	
C102	02-60002	1			0.1uF 250V Mylar	Illinois 104MSR250K	
C103	02-60002	1			0.1uF 250V Mylar	Illinois 104MSR250K	

REF.DES.	STOCK #	QUANTITY	DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A T N			
C104	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C105	02-90006	1	1uF 5% 50V Polycarbonate	IMB RA20105J	
C106	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C107	02-50000	1	0.22uF 10% 50V Polystyrene	IMB PA2A224K	
C108	02-30006	1	0.47uF 35V Tantalum Bead	TAP474K035SP	
C109	02-60002	1	0.1uF 250V Mylar	Illinois 104MSR250K	
C110	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C111	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C112	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C113	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
CR10	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR11	03-20048	1	Rectifier, Schottkey	Motorola 1N5818	
CR12	03-20048	1	Rectifier, Schottkey	Motorola 1N5818	
CR13	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR14	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR15	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
D101	03-20006	1	Diode, low leakage	1N3595	
D102	03-20006	1	Diode, low leakage	1N3595	
D106	03-20000	1	Diode, general purpose	1N4148 or 1N914	
D107	03-20000	1	Diode, general purpose	1N4148 or 1N914	
D108	03-20000	1	Diode, general purpose	1N4148 or 1N914	
IC11	03-30013	1	Op-Amp, General Purpose, Uncompensated	LM301AH or LM301AN	
IC12	03-30017	1	Op-Amp, Uncompensated	LM308H	
IC13	03-30017	1	Op-Amp, Uncompensated	LM308H	
IC14	03-30015	1	Regulator, +12V, 0.5A, TO202 or TO220	78M12CP	
IC15	03-30015	1	Regulator, +12V, 0.5A, TO202 or TO220	78M12CP	
IC16	03-30638	1	Regulator, 1A, Low Dropout, +5V	National LM2940CT-5.0	
IC101	03-30336	1	Low Noise Precision Chopper Amplifier	7652CPD	
IC102	03-30016	1	BCD to 7-Segment Decoder/LED Driver	7447AN	
IC103	03-30114	1	A to D convertor (digital portion)	Intersil ICL71C03ACPI or equiv.	
IC104	03-30113	1	A to D Convertor (analog portion)	Intersil ICL8068ACPD or equiv.	
IC105	05-02007	1	Programmable Osc., 8.3Hz-1MHz	Statek, PX01000KHzA	
IC106	03-30122	1	6.95V 1% Precision reference	National or Lin. Tech. LM399H or AH	
IC107	03-30168	1	Regulator, +5V, 100mA, TO92	78L05ACLP	
IC108	03-30169	1	Regulator, -5V, 100mA, TO92	79L05CLP	
PL1	05-10372	2	Wafer, 6 pin, gold, 0.10 Sp, 0.56 Lg	Molex 22-10-2061	
PL2	05-10817	1	Header, 2 Pin, Straight, .1"sp, Gold, Locking	Molex 22-11-2022	
Q7	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q10	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q12	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q14	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q16	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q18	03-10014	1	NPN Darlington (TO92)	2N5305	
Q20	03-10037	1	NPN Darlington (TO3)	2N6282	
R23	01-01015	1	47 5% 1/4W Carbon Film	RC07GF470J	
R24	01-01015	1	47 5% 1/4W Carbon Film	RC07GF470J	
R25	01-01015	1	47 5% 1/4W Carbon Film	RC07GF470J	
R30	01-01106	1	2.4M 5% 1/4W Carbon Film	RC07GP245J	
R31	01-50001	1	50K End Adjust (wide)	Beckman 89XR50K	
R33	01-01063	1	15K 5% 1/4W Carbon Film	RC07GP153J	
R39	01-01043	1	1.5K 5% 1/4W Carbon Film	RC07GF152J	

REF.DES.	STOCK #	QUANTITY	DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A T N			
R49	01-10000		1 Factory Select Resistor	RN60C???	
R50	01-10000		1 Factory Select Resistor	RN60C???	
R51	01-20015	1	591.45K 0.05% 2ppm/C Wire Wound	Goldstar GS711-591K45-.05%-2PPM	
R52	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R53	01-01073	1	47K 5% 1/4W Carbon Film	RC07GF473J	
R54	01-01045	1	2K 5% 1/4W Carbon Film	RC07GF202J	
R55	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	
R56	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R57	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R58	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R59	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R60	01-50014	1	100 Top Adjust	Beckman 68WR100ohm	
R61	01-10032	1	69.8 1% 50ppm/C 1/4W Metal Film	RN60C69R8F	
R62	01-20022	1	1.01 0.1% 10ppm/C Wire Wound	Goldstar R0001 (Block)	
R63	01-20025	1	9.09 0.05% 5ppm/C Wire wound	Goldstar GS810-9R09-.05%-5ppm	
R64	01-50013	1	1K Top Adjust	Beckman 68WR1K	
R65	01-10031	1	634 1% 50ppm/C 1/4W Metal Film	RN60C6340F	
R66	01-50012	1	10K Top Adjust	Beckman 68WR10K	
R67	01-10033	1	6.34K 1% 50ppm/C 1/4W Metal Film	RN60C6341F	
R68	01-20029	1	90.9 0.05% 5ppm/C wire wound	Goldstar GS809-90R9-.05%-5ppm	
R69	01-20012	1	897.25 0.05% 5ppm/C Wire Wound	Goldstar GS805-897R25-.05%-5PPM	
R70	01-50018	1	10 Top Adjust	Beckman 68WR10ohm	
R71	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	
R72	01-30001	1	1 20% 8W power wire wound	Ohmite 1500 Brown Devil	
R73	01-20011	1	8.9725K 0.05% 5ppm/C Wire Wound	Goldstar GS805-8.9725K-.05%-5PPM	
R74	01-50014	1	100 Top Adjust	Beckman 68WR100ohm	
R75	01-20010	1	89.725K 0.05% 5ppm/C Wire Wound	Goldstar GS805-89.725K-0.05%-5PPM	
R76	01-50013	1	1K Top Adjust	Beckman 68WR1K	
R77	01-01041	1	1K 5% 1/4W Carbon Film	RC07GF102J	
R78	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R79	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R80	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R81	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R82	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R100	01-01041	1	1K 5% 1/4W Carbon Film	RC07GF102J	
R101	01-01073	1	47K 5% 1/4W Carbon Film	RC07GF473J	
R102	01-20016	1	1K 0.05% 5ppm/C Wire Wound	Goldstar GS805-1K-.05%-5PPM	
R103	01-20005	1	9K 0.05% 5ppm/C Wire Wound	Goldstar GS711-9K-.05%-5PPM	
R105	01-01021	1	100 5% 1/4W Carbon Film	RC07GF101J	
R106	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	
R107	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	
R108	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R109	01-01070	1	33K 5% 1/4W Carbon Film	RC07GF333J	
R110	01-01083	1	150K 5% 1/4W Carbon Film	RC07GF154J	
R111	01-10000		1 Factory Select Resistor	RN60C???	
R112	01-10269	1	66.5K 1% 50ppm/C 1/4W Metal Film	RN60C6652F	
R113	01-20002	1	9 0.05% 5ppm/C Wire Wound	Goldstar GS810-.05%-5PPM	
R114	01-01001	1	1.0 5% 1/4W Carbon Film	RC07GF1R0J	
R115	01-10000		1 Factory Select Resistor	RN60C???	
R116	01-10061	1	4.99K 1% 50ppm/C 1/4W Metal Film	RN60C4991F	
R117	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	

REF.DES.	STOCK #	QUANTITY			DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A	T	N			
R118	01-10000				1 Factory Select Resistor	RN60C???	
R119	01-20149	1			1K .05% 5ppm/C Wire Wound	Goldstar GS602-1K-.05%-5ppm	
RN101	01-40004	1			8 x 47 Network	A-B 316B-470	
RV101	01-50000	1			100 Single Turn	CTS X201R101	
RV102	01-50015	1			2.5K Single Turn	CTS X201R252	
S1	05-03022	1			Switch,6Sta.,8Pole,Int-lock	Centralab,78354-3	
S2	05-03023	1			Switch,2Sta.,4Pole,Int-Lock	Centralab,78354-4	
S3	05-03003	1			Switch, DPDT, Push-Push	Centralab 004184	
S4	05-03003	1			Switch, DPDT, Push-Push	Centralab 004184	
SK103	05-10295	1			Socket, dil, 28 pin	Burndy DILB28P-108	
SK104	05-10041	1			Socket, dil, 14 pin	Burndy 8514-01	
T2	04-20088	1			Power Transformer	DWG 4100-012	

REF.DES.	STOCK #	QUANTITY			DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A	T	N			
1	04-10510	1			4100ATC Finished Front Panel	DWG 4100-100 using 04-10074	
2	04-10333	4			Standard Bezel	DWG 2724-205	
3	04-10911		1		2790 Top & Bottom Cover	DWG 2790-228	
4	04-10460	2			2790 Side Rail	DWG 2790-206	
5	91-06006	14			#6-32 x 3/8" Phil Flat 82 Deg. S.S.		
6	92-06004		4		6-32 x 1/4" Phil Truss Head S.S.		
7	05-10808		2		Dual Tilting Feet (Plastic,Gray)	Elma Electronics 63-018S	
8	90-06006	6			#6-32 x 3/8" Phil Pan S.S.		
9	98-06000	6			#6 Flat Washer STD S.S.		
10	05-10361	2			Foot, hard, rubber, grey	ACC.Rubber 2095W-017-GREY	
11	04-11026	1			4100 Series Rear-Panel (Standard)	DWG 4100-220	
12	98-06002	6			#6 Internal Star Washer, S.S.		
13	90-06004	6			#6-32 x 1/4" Phil Pan S.S.		
14	05-10673	6			Standoff,1/4 Hex,1/4 Lg,#6,M-F,S.S.	Raf 4530-632-SS-0	
15	98-06001	10			#6 Split Lock Washer,STD,S.S.		
16	04-10346	2			2300/2575A/4100 Main bd. support bar	DWG 2300-214	
17	05-10018	1			Fuseholder, panel mount	Littlefuse 345061	
18	05-10166	1			Receptical, AC, filter	Corcom 6EF1	
19	91-06008	2			#6-32 x 1/2" Phil Flat 82 Deg. S.S.		
20	05-03017	1			Slide Switch,115/230V,2Pole	Switchcraft,4625LFR	
21	98-04001	2			#4 Split Lock Washer S.S.		
22	97-04000	6			#4-40 Standard Hex Nut, S.S.		
23	04-11028		1		Bottom Cover	DWG 2790-229	
24	05-10001	2			Binding post, red	Superior BP21RC	
25	05-10002	2			Binding post, white	Superior BP21WTC	
26	05-10051	1			Connector, male, BNC, panel mount	UG185	
27	90-04006	4			#4-40 x 3/8" Phil Pan S.S.		
28	98-04002	4			#4 Internal Star Washer S.S.		
29	70-00004	5			1/4" Black Shrink Tubing FP301	3M 3000250BK	
30	70-00002	3			1/8" Black Shrink Tubing FP301	3M 3000125BK	
31	80-02020	16			20awg Wire, Black TFE	M16878/4-BGE-0	
32	80-02120	6			20awg Wire, Brown TFE	M16878/4-BGE-1	
33	80-02920	6			20awg Wire, White TFE	M16878/4-BGE-9	
34	80-02820	12			20awg Wire, Gray TFE	M16878/4-BGE-8	
35	80-02520	5			20awg Wire, Green TFE	M16878/4-BGE-5	
37	05-04010	1			0.25A,Slo Blo Fuse	Littlefuse,313-.250	
A1	4100-600	1			4100ATC Main Board Assembly	Assembly 4100-600	

REF.DES.	STOCK #	QUANTITY	DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A T N			
1	80-00022	6	22AWG Bus Wire	1BB-2201 ANIXTER	
A1	04-30013	1	4014 Display Board	DWG 4014-701	
DS1	05-01010	1	Display,LED,Red,0-9	HP 5082-7650 Bin C, D or E	
DS2	05-01010	1	Display,LED,Red,0-9	HP 5082-7650 Bin C, D or E	
DS3	05-01010	1	Display,LED,Red,0-9	HP 5082-7650 Bin C, D or E	
DS4	05-01010	1	Display,LED,Red,0-9	HP 5082-7650 Bin C, D or E	
DS5	05-01010	1	Display,LED,Red,0-9	HP 5082-7650 Bin C, D or E	
R35	01-01015	1	47 5% 1/4W Carbon Film	RC07GF470J	

REF.DES.	STOCK #	QUANTITY			DESCRIPTION	MANUFACTURING/PURCHASING DATA
		A	T	N		
A1	04-30051	1			4165 Output Voltage Clamp Board	DWG 4165-700
C1	02-10000	1			0.005u 100V Ceramic disc	SPRAGUE 56AD50
CR1	03-20006	1			Diode, low leakage	
IC1	03-30090	1			General Purpose JFET Op-Amp	
IC2	03-30090	1			General Purpose JFET Op-Amp	
IC3	03-30064	1			2.5V, 1%, 5ppm/C, Reference	
R1	01-01081	1			100K 5% 1/4W Carbon Film	
R2	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J
R3	01-10006	1			100K 1% 50ppm/C 1/4W Metal Film	RN60C1003F
R4	01-10006	1			100K 1% 50ppm/C 1/4W Metal Film	RN60C1003F
R5	01-10108	1			7.5K 1% 50ppm/C 1/4W Metal Film	RN60C7501F
R6	01-50012	1			10K Top Adjust	Beckman 68WR10K
R7	01-10109	1			43.2K 1% 50ppm/C 1/4W Metal Film	RN60C4322F
R8	01-50029	1			500 Top Adjust	Beckman 68WR500ohm
R9	01-10110	1			1.13K 1% 50ppm/C 1/4W Metal Film	RN60C1131F

REF.DES.	STOCK #	QUANTITY	DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A T N			
2	04-30012	1	4100 Series Main Board	DWG 4100-700	
3	80-00022	25	22AWG Bus Wire	1BB-2201 ANIXTER	
4	70-11022	25	22AWG TFE Sleeving	ATC TFT 22	
5	80-02220	22	20awg Wire, Red TFE	M16878/4-BGE-2	
6	70-00003	10	3/16" Black Shrink Tubing	3000187 BLK 3M	
7	99-06000	4	#6 18-22awg Ring Lug (Red)	PANDUIT PV18-6R	
8	05-10019	5	Cable tie, 4"x 1/8"	Panduit WRN-4	
9	05-10903	1	Heatsink, Wave Solder, 1" High (TO-3) .062 Bd	AAVID 568203B00600	
10	70-00002	1	1/8" Black Shrink Tubing FP301	3M 3000125BK	
12	05-10006	2	Chassis fastener, swage, 1/4sq, 4-40	Useco B1591B	
13	05-10838	1	Heatsink, TO-220, Black Anodize	AAVID #576802B04000	
14	80-10174	12	RG174/U Coax Cable, 50 ohm	Belden 8216	
15	80-00014	5	14awg Bus Wire	ANIXTER 1BB-1401	
20	90-04003	2	#4-40 x 3/16" Phil Pan S.S.		
21	96-00043	2	#6-32 x 9/16" Phil Pan Zinc Plated		
23	90-06006	1	#6-32 x 3/8" Phil Pan S.S.		
26	90-06004	1	#6-32 x 1/4" Phil Pan S.S.		
27	98-04002	2	#4 Internal Star Washer S.S.		
28	98-06002	4	#6 Internal Star Washer, S.S.		
29	97-04001	2	#4-40 Radio Hex Nut S.S.		
30	97-06001	1	#6-32 Hex Nut, Small Pattern, Stainless-Steel		
36	05-10073	10	Knob, black, rectangular	Centralab B304-BLK	
64	99-99009	1	THREADLOCK MEDIUM	Loctite 222	
A1	4165-601	1	4165-1344 Output Voltage Clamp Bd. ASSY	Assembly 4165-601	
C4	02-60003	1	1uF 100V Mylar	Illinois 105MSR250K	
C11	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C12	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C13	02-40001	1	220uF 25V Aluminum Axial	Illinois 227TTA025M	
C14	02-40001	1	220uF 25V Aluminum Axial	Illinois 227TTA025M	
C15	02-10005	1	50pF 500V Ceramic disc	Illinois 500BCR050K	02-20002
C16	02-60002	1	0.1uF 250V Mylar	Illinois 104MSR250K	
C17	02-10002	1	500pF 100V Ceramic Disc	SPRAGUE 56AT50	
C18	02-40000	1	4700uF 16V Aluminum Axial	Illinois 478TTA016	
C19	02-40000	1	4700uF 16V Aluminum Axial	Illinois 478TTA016	
C20	02-10009	1	0.001uF 50V Ceramic Disc	NIC NCD102K1VX5P	
C25	02-60001	1	0.22uF 100V Mylar	Illinois 224SHR100K75CE	
C27	02-30004	1	1uF 25V Tantalum Bead	Kemet T350A105K025AS	
C60	02-20013	1	100pF 500V Mica	CM05FD101J03	
C61	02-10014	1	0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C62	02-10014	1	0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C63	02-40000	1	4700uF 16V Aluminum Axial	Illinois 478TTA016	
C64	02-30004	1	1uF 25V Tantalum Bead	Kemet T350A105K025AS	
C65	02-30002	1	33uF 10V Tantalum Bead	IDC336K010NLF	
CR3	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR4	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR5	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR6	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR7	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR8	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR9	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
C101	02-90006	1	1uF 5% 50V Polycarbonate	IMB RA20105J	

REF.DES.	STOCK #	QUANTITY	DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A T N			
C102	02-60002	1	0.1uF 250V Mylar	Illinois 104MSR250K	
C103	02-60002	1	0.1uF 250V Mylar	Illinois 104MSR250K	
C104	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C105	02-90006	1	1uF 5% 50V Polycarbonate	IMB RA20105J	
C106	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C107	02-50000	1	0.22uF 10% 50V Polystyrene	IMB PA2A224K	
C108	02-30006	1	0.47uF 35V Tantalum Bead	TAP474K035SP	
C109	02-60002	1	0.1uF 250V Mylar	Illinois 104MSR250K	
C110	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C111	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C112	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
C113	02-30001	1	10uF 25V Tantalum Bead	AVX TAP106K025SP	
CR10	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
CR11	03-20048	1	Rectifier, Schottkey	Motorola 1N5818	
CR12	03-20048	1	Rectifier, Schottkey	Motorola 1N5818	
CR15	03-20002	1	Diode, rectifier, 1A, 50V	1N4001-1N4007	
D101	03-20006	1	Diode, low leakage	1N3595	
D102	03-20006	1	Diode, low leakage	1N3595	
D106	03-20000	1	Diode, general purpose	1N4148 or 1N914	
D107	03-20000	1	Diode, general purpose	1N4148 or 1N914	
D108	03-20000	1	Diode, general purpose	1N4148 or 1N914	
DS101	05-01011	1	LED,Red,Panel Mount	Micro Elec. MRB51D	
DS102	05-01011	1	LED,Red,Panel Mount	Micro Elec. MRB51D	
IC11	03-30013	1	Op-Amp,General Purpose,Uncompensated	LM301AH or LM301AN	
IC12	03-30017	1	Op-Amp,Uncompensated	LM308H	
IC13	03-30017	1	Op-Amp,Uncompensated	LM308H	
IC14	03-30015	1	Regulator,+12V,0.5A,TO202 or TO220	78M12CP	
IC15	03-30015	1	Regulator,+12V,0.5A,TO202 or TO220	78M12CP	
IC16	03-30638	1	Regulator, 1A, Low Dropout, +5V	National LM2940CT-5.0	
IC101	03-30336	1	Low Noise Precision Chopper Amplifier	7652CPD	
IC102	03-30016	1	BCD to 7-Segment Decoder/LED Driver	7447AN	
IC103	03-30114	1	A to D convertor (digital portion)	Intersil ICL71C03ACPI or equiv.	
IC104	03-30113	1	A to D Convertor (analog portion)	Intersil ICL8068ACPD or equiv.	
IC105	05-02007	1	Programmable Osc.,8.3Hz-1MHz	Statek,PX01000KHzA	
IC106	03-30122	1	6.95V 1% Precision reference	National or Lin. Tech. LM399H or AH	
IC107	03-30168	1	Regulator, +5V, 100mA, TO92	78L05ACLP	
IC108	03-30169	1	Regulator, -5V, 100mA, TO92	79L05CLP	
IC109	03-30034	1	Regulator,+5V,0.5A,TO202 or TO220	78M05CP or LM340T-5.0	
PL1	05-10372	2	Wafer,6 pin,gold,0.10 Sp,0.56 Lg	Molex 22-10-2061	
PL2	05-10817	1	Header, 2 Pin, Straight, .1"sp, Gold, Locking	Molex 22-11-2022	
Q7	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q10	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q12	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q14	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q16	03-10003	1	NPN Darlington Transistor (TO92)	2N5172	
Q18	03-10014	1	NPN Darlington (TO92)	2N5305	
Q20	03-10037	1	NPN Darlington (TO3)	2N6282	
R23	01-01015	1	47 5% 1/4W Carbon Film	RC07GF470J	
R24	01-01015	1	47 5% 1/4W Carbon Film	RC07GF470J	
R25	01-01015	1	47 5% 1/4W Carbon Film	RC07GF470J	
R26	01-01015	1	47 5% 1/4W Carbon Film	RC07GF470J	

REF.DES.	STOCK #	QUANTITY	DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A T N			
R30	01-01110	1	3.9M 5% 1/4W Carbon Film	RC07GF395J	
R31	01-50001	1	50K End Adjust (wide)	Beckman 89XR50K	
R33	01-01063	1	15K 5% 1/4W Carbon Film	RC07GF153J	
R39	01-01043	1	1.5K 5% 1/4W Carbon Film	RC07GF152J	
R49	01-10000	1	Factory Select Resistor	RN60C???	
R50	01-10000	1	Factory Select Resistor	RN60C???	
R51	01-20015	1	591.45K 0.05% 2ppm/C Wire Wound	Goldstar GS711-591K45-.05%-2PPM	
R52	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R53	01-01073	1	47K 5% 1/4W Carbon Film	RC07GF473J	
R54	01-01045	1	2K 5% 1/4W Carbon Film	RC07GF202J	
R55	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	
R56	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R57	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R58	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R59	01-20017	1	100K 0.05% 5ppm/C Wire Wound	Goldstar GS711-100K-.05%-5PPM	
R60	01-50014	1	100 Top Adjust	Beckman 68WR100ohm	
R61	01-10032	1	69.8 1% 50ppm/C 1/4W Metal Film	RN60C69R8F	
R62	01-20022	1	1.01 0.1% 10ppm/C Wire Wound	Goldstar R0001 (Block)	
R63	01-20025	1	9.09 0.05% 5ppm/C wire wound	Goldstar GS810-9R09-.05%-5ppm	
R64	01-50013	1	1K Top Adjust	Beckman 68WR1K	
R65	01-10031	1	634 1% 50ppm/C 1/4W Metal Film	RN60C6340F	
R66	01-50012	1	10K Top Adjust	Beckman 68WR10K	
R67	01-10033	1	6.34K 1% 50ppm/C 1/4W Metal Film	RN60C6341F	
R68	01-20029	1	90.9 0.05% 5ppm/C wire wound	Goldstar GS809-90R9-.05%-5ppm	
R69	01-20012	1	897.25 0.05% 5ppm/C Wire Wound	Goldstar GS805-897R25-.05%-5PPM	
R70	01-50018	1	10 Top Adjust	Beckman 68WR100ohm	
R71	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	
R72	01-30001	1	1 20% 8W power wire wound	Ohmite 1500 Brown Devil	
R73	01-20011	1	8.9725K 0.05% 5ppm/C Wire Wound	Goldstar GS805-8.9725K-.05%-5PPM	
R74	01-50014	1	100 Top Adjust	Beckman 68WR100ohm	
R75	01-20010	1	89.725K 0.05% 5ppm/C Wire Wound	Goldstar GS805-89.725K-0.05%-5PPM	
R76	01-50013	1	1K Top Adjust	Beckman 68WR1K	
R77	01-01041	1	1K 5% 1/4W Carbon Film	RC07GF102J	
R78	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R79	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R80	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R81	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R82	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R100	01-01041	1	1K 5% 1/4W Carbon Film	RC07GF102J	
R101	01-01073	1	47K 5% 1/4W Carbon Film	RC07GF473J	
R102	01-20016	1	1K 0.05% 5ppm/C Wire Wound	Goldstar GS805-1K-.05%-5PPM	
R103	01-20005	1	9K 0.05% 5ppm/C Wire Wound	Goldstar GS711-9K-.05%-5PPM	
R105	01-01021	1	100 5% 1/4W Carbon Film	RC07GF101J	
R106	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	
R107	01-01081	1	100K 5% 1/4W Carbon Film	RC07GF104J	
R108	01-01061	1	10K 5% 1/4W Carbon Film	RC07GF103J	
R109	01-01070	1	33K 5% 1/4W Carbon Film	RC07GF333J	
R110	01-01083	1	150K 5% 1/4W Carbon Film	RC07GF154J	
R111	01-10000	1	Factory Select Resistor	RN60C???	
R112	01-10269	1	66.5K 1% 50ppm/C 1/4W Metal Film	RN60C6652F	
R113	01-20002	1	9 0.05% 5ppm/C Wire Wound	Goldstar GS810-.05%-5PPM	

REF.DES.	STOCK #	QUANTITY	DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A T N			
R114	01-01001	1	1.0 5% 1/4W Carbon Film	RC07GF1R0J	
R115	01-10000		1 Factory Select Resistor	RN60C???	
R116	01-10061	1	4.99K 1% 50ppm/C 1/4W Metal Film	RN60C4991F	
R117	01-10181	1	444.4K 1% 10ppm/C 1/8W Metal Film	PRP 1/8W - 444.4K - 1% - 10PPM	
R118	01-10000		1 Factory Select Resistor	RN60C???	
R119	01-20149	1	1K .05% 5ppm/C Wire Wound	Goldstar GS602-1K-.05%-5ppm	
R120	01-01041	1	1K 5% 1/4W Carbon Film	RC07GF102J	
R121	01-01041	1	1K 5% 1/4W Carbon Film	RC07GF102J	
RN101	01-40004	1	8 x 47 Network	A-B 316B-470	
KV101	01-50000	1	100 Single Turn	CTS X201R101	
KV102	01-50015	1	2.5K Single Turn	CTS X201R252	
KV103	01-50024	1	100K Top Adjust	Beckman 68WR100K	
S1	05-03022	1	Switch,6Sta.,8Pole,Int-lock	Centralab,78354-3	
S2	05-03023	1	Switch,2Sta.,4Pole,Int-Lock	Centralab,78354-4	
S3	05-03003	1	Switch, DPDT, Push-Push	Centralab 004184	
S4	05-03003	1	Switch, DPDT, Push-Push	Centralab 004184	
S100	05-03024	1	Switch,3Sta.,8Pole,Int-Lock	Centralab,78354-2	
SK103	05-10295	1	Socket, dil, 28 pin	Burndy DILB28P-108	
SK104	05-10041	1	Socket, dil, 14 pin	Burndy 8514-01	
T2	04-20088	1	Power Transformer	DWG 4100-012	

REF.DES.	STOCK #	QUANTITY			DESCRIPTION	MANUFACTURING/PURCHASING DATA
		A	T	N		
A1	04-30051	1			4165 Output Voltage Clamp Board	DWG 4165-700
C1	02-10000	1			0.005u 100V Ceramic disc	SPRAGUE 56AD50
CR1	03-20006	1			Diode, low leakage	
IC1	03-30090	1			General Purpose JFET Op-Amp	
IC2	03-30090	1			General Purpose JFET Op-Amp	
IC3	03-30064	1			2.5V, 1%, 5ppm/C, Reference	
R1	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J
R2	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J
R3	01-10006	1			100K 1% 50ppm/C 1/4W Metal Film	RN60C1003F
R4	01-10006	1			100K 1% 50ppm/C 1/4W Metal Film	RN60C1003F
R5	01-10108	1			7.5K 1% 50ppm/C 1/4W Metal Film	RN60C7501F
R6	01-50012	1			10K Top Adjust	Beckman 68WR10K
R7	01-10109	1			43.2K 1% 50ppm/C 1/4W Metal Film	RN60C4322F
R8	01-50014	1			100 Top Adjust	Beckman 68WR100ohm
R9	01-10143	1			453 1% 50ppm/C 1/4W Metal Film	RN60C4530F

REF.DES.	STOCK #	QUANTITY			DESCRIPTION	MANUFACTURING/PURCHASING DATA	ALTERNATE
		A	T	N			
1	80-03930	2			30awg Wire, White Kynar		
2	05-10019	6			Cable tie, 4"x 1/8"	Panduit WRN-4	
3	04-30155	1			2053A/4100 BCD Board	DWG 2053-706	
4	90-02006	2			#2-56 x 3/8" Phil Pan S.S.		
5	98-02000	2			#2 Flat Washer, S.S.		
6	98-02001	2			#2 Split Lock Washer		
7	97-02000	2			#2-56 Hex Nut		
8	04-11027		1		4100 "BCD" Rear Panel	DWG 4100-221	
9	05-10340	12			Crimp Terminal for 0.1" Housings, Gold, 22AWG	Molex 08-55-0102	
11	80-01122	28			22AWG Wire, Brown PVC	M16878/1-BFE-1	
12	80-01222	28			22AWG Wire, Red PVC	M16878/1-BFE-2	
13	80-01322	28			22AWG Wire, Orange PVC	M16878/1-BFE-3	
14	80-01422	14			22AWG Wire, Yellow PVC	M16878/1-BFE-4	
15	80-01522	28			22AWG Wire, Green PVC	M16878/1-BFE-5	
16	80-01622	28			22AWG Wire, Blue PVC	M16878/1-BFE-6	
17	80-01722	14			22AWG Wire, Violet PVC	M16878/1-BFE-7	
18	80-01822	14			22AWG Wire, Gray PVC	M16878/1-BFE-8	
19	80-01922	14			22AWG Wire, White PVC	M16878/1-BFE-9	
20	80-01022	14			22AWG Wire, Black PVC	M16878/1-BFE-0	
C1	02-40029	1			100uF 25V Aluminum Radial	Illinois 107RMR025M	
C2	02-10014	1			0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C3	02-10014	1			0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C4	02-10014	1			0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C5	02-10014	1			0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
C6	02-10014	1			0.1uF 50V Ceramic Disc	AVX SR205E104MAA00	
IC1	03-30039	1			Quad Latch (CMOS)	4042BE	
IC2	03-30039	1			Quad Latch (CMOS)	4042BE	
IC3	03-30039	1			Quad Latch (CMOS)	4042BE	
IC4	03-30039	1			Quad Latch (CMOS)	4042BE	
IC5	03-30039	1			Quad Latch (CMOS)	4042BE	
IC6	03-50088		1		4100 Series BCD Fixit PROM	DWG 4100-900 using 03-30418	
R1	01-01081	1			100K 5% 1/4W Carbon Film	RC07GF104J	
SK2	05-10012	1			Connector, 50-pin "D", Female with Bail	Amphenol 57-40500	
SK3	05-10498	1			Connector Housing, 12 Position, 0.1" Spacing	Molex 22-01-2121	
XIC6	05-10294	1			Socket, dil, 20 pin	Burndy DILB20P-108	

SECTION XIII DRAWINGS AND SCHEMATICS





The following drawings have been included in this manual:

4100-600	1 page	4100ATC Main PCB Assembly
4100-601	1 page	Display Board Assembly
4100-400	1 page	4100/4150 Chassis Assembly
4100-074	2 pages	4100/4150 Schematic
4165-070	1 page	4165 Clamp Schematic
4165-071	1 page	4165-1344 Clamp Schematic
4165-600	1 page	Clamp PCB Assembly
2053-076	1 page	Option BCD Interface Schematic
4100-407	1 page	Option BCD Interface Installation

NOTES: Unless otherwise specified

- 1 SEE SEPARATE PARTS LISTS: 4100-600, 4150-600, AND 4165-402
- 2 WIRES ARE TO BE TWISTED 1 TO 2 TWISTS PER INCH, (OPTIONAL WIRING SHOWN)
- 3 USE REMOVABLE LOCK-TITE ON HARDWARE (ITEM # 64)
- 4 INSTALL WIRING ON SOLDER SIDE (TWISTED PAIR):
(NEAR PL2) OV → C10B - USING ITEM# 37 BLK
5V → C10B + USING ITEM# 5 RED
- 5 JUMPER APPROPRIATE PADS ON SOLDER-SIDE TO CONFIGURE FOR "4100ATC" OR "ALL OTHERS"
- 6 FOR MODELS 4150ATC, 4165, AND 4165-1344, ALSO COMPLETE THE STEPS BELOW:
 - a. JUMPER PADS #21 TO #22 USING 22 AWG BUSS WIRE. (ITEM #3)
 - b. JUMPER PADS #20 TO #25 USING 22 AWG BUSS WIRE. (ITEMS #3 AND #4)
 - c. SLEEVE D101 AND D102 USING ITEM #10 (HEATSHRINK).

REVISIONS			
ECR	LTR	DESCRIPTION OF CHANGE	DATE
			APPROVED

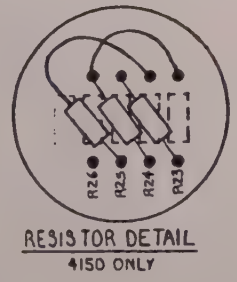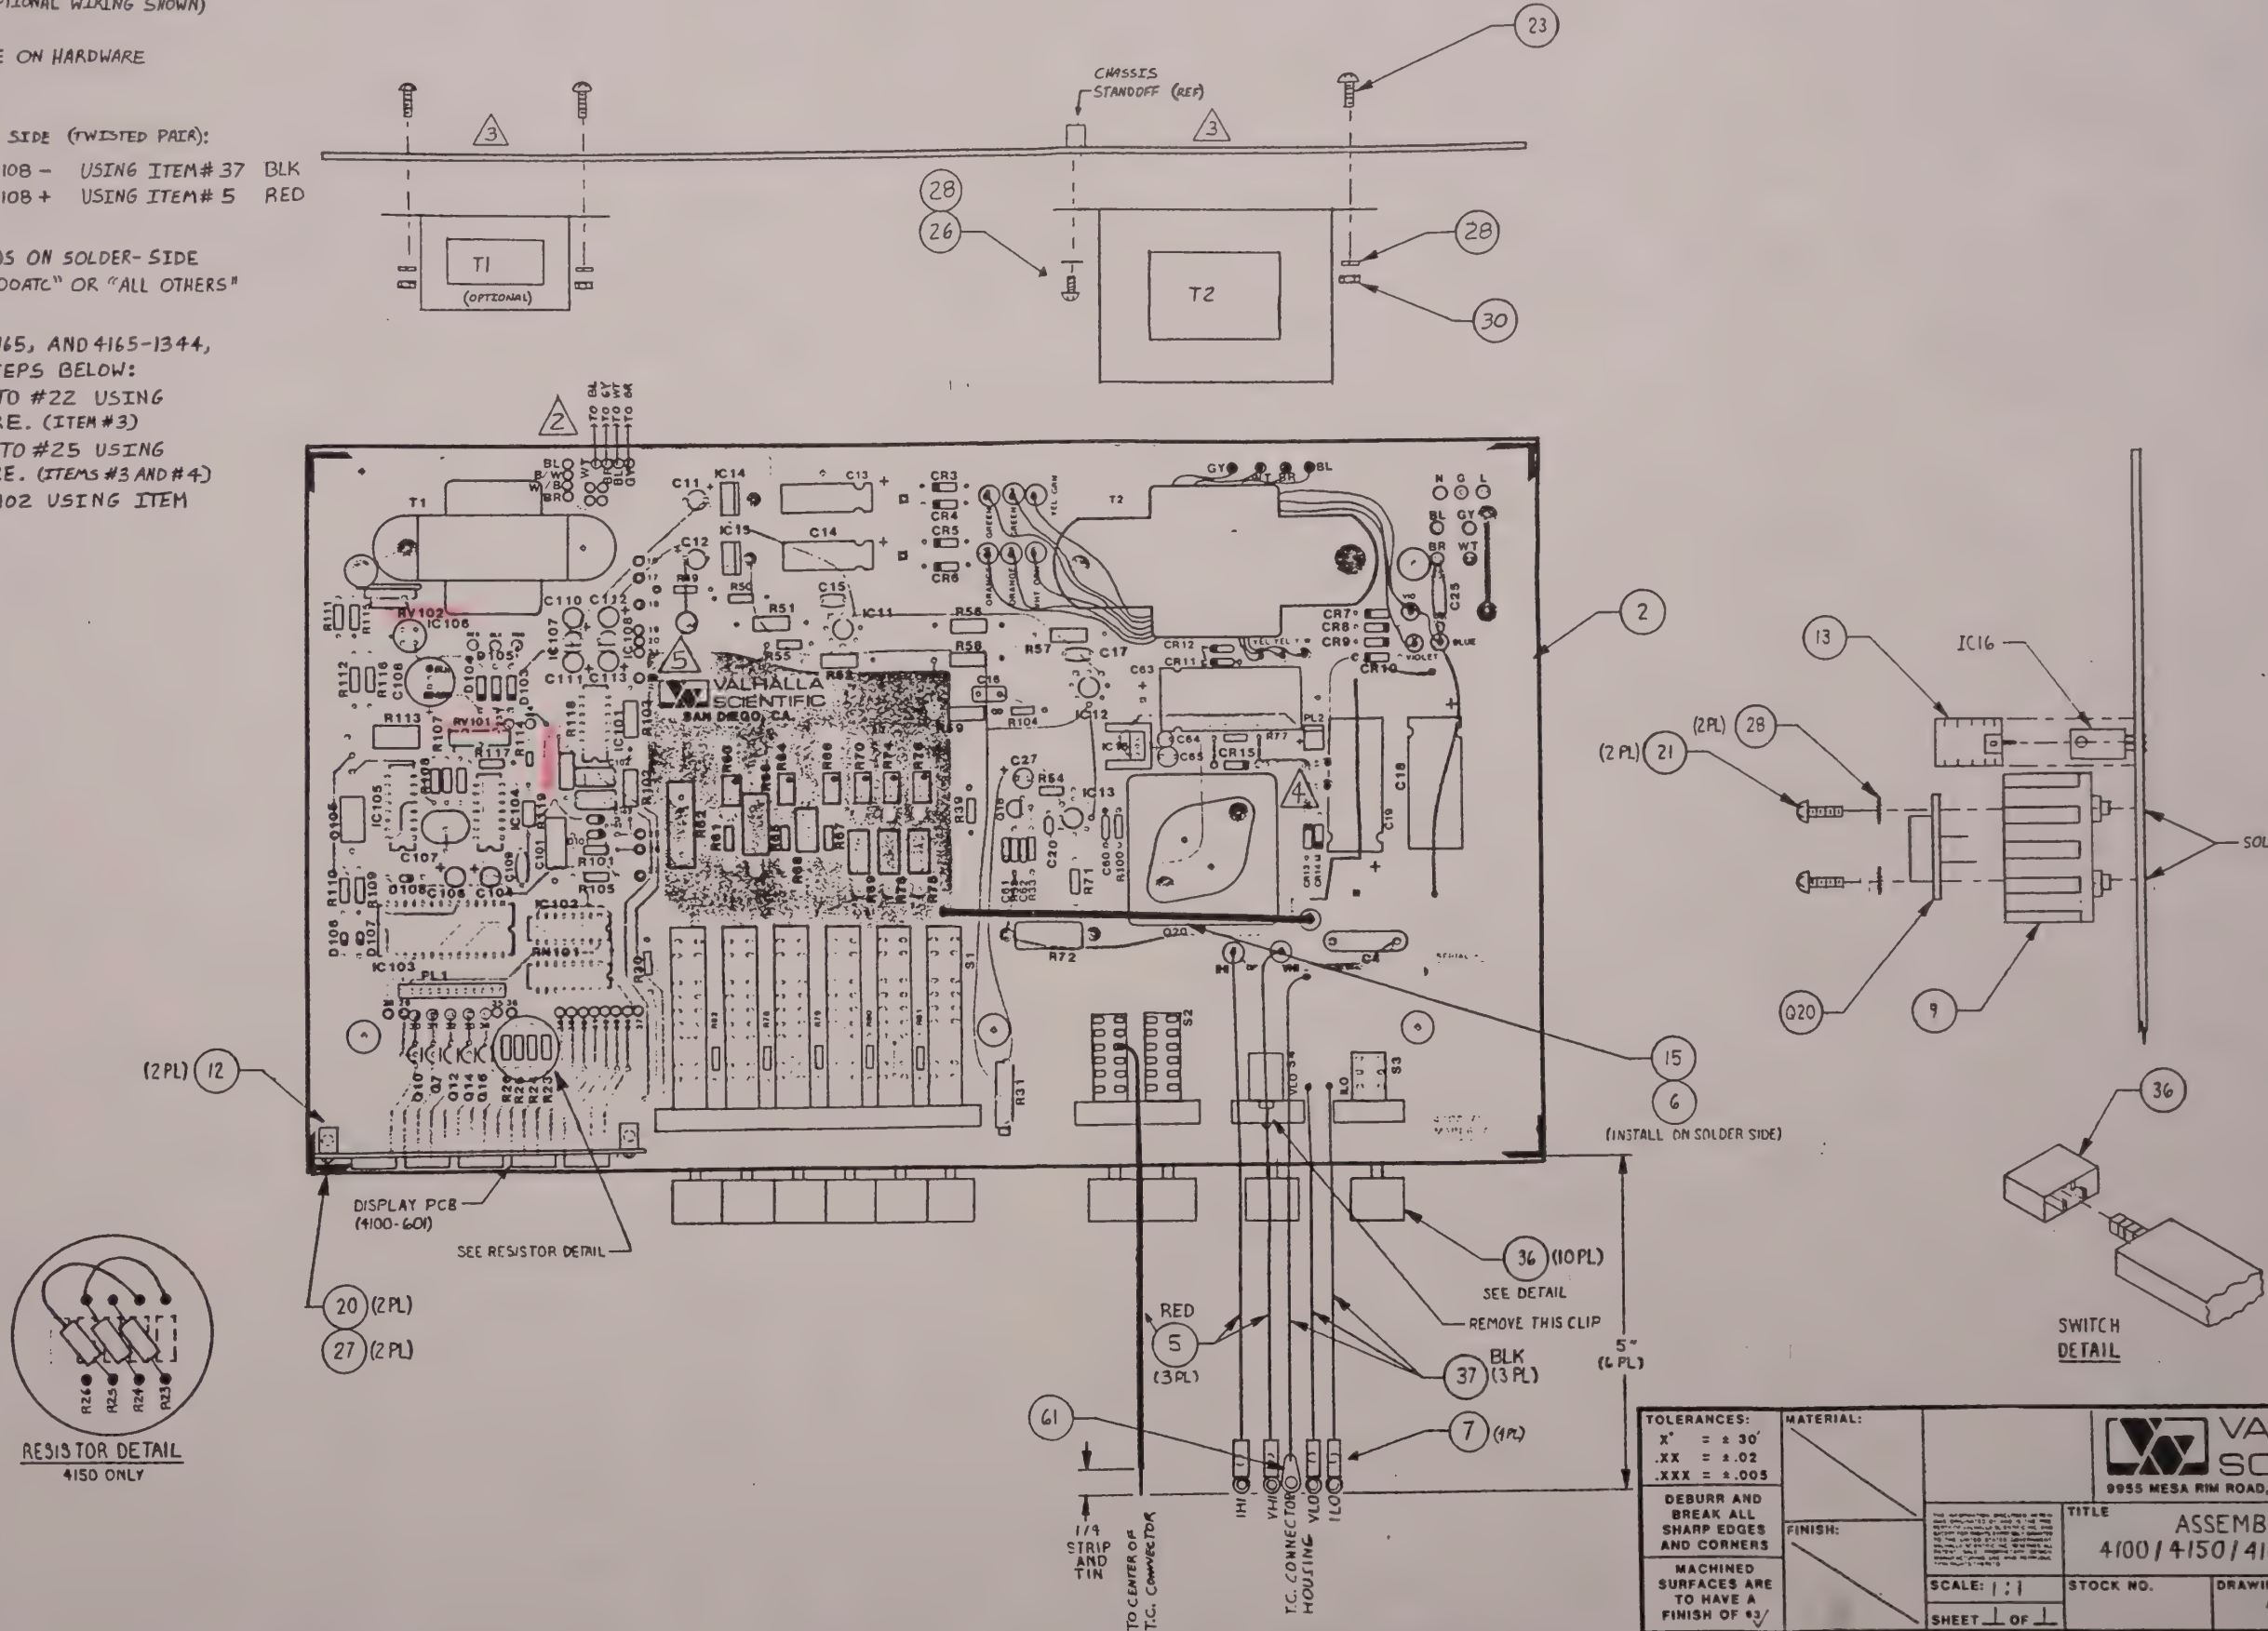


TOLERANCES: X' = ± .30' .XX = ± .02 .XXX = ± .005		MATERIAL:		 VALHALLA SCIENTIFIC 9955 MESA RIM ROAD, SAN DIEGO, CA 92121	
DEBURR AND BREAK ALL SHARP EDGES AND CORNERS		FINISH:			
MACHINED SURFACES ARE TO HAVE A FINISH OF #3/		TITLE ASSEMBLY- 4100/4150/4165 MAIN BOARD		SCALE: 1:1	STOCK NO.
SHEET 1 OF 1		DRAWING NO. 4100-600		REV: T	

NOTES: Unless otherwise specified

1: SEE SEPARATE PARTS LIST.

REVISIONS				
ECR#	LTR	DESCRIPTION OF CHANGE	DATE	APPROVED

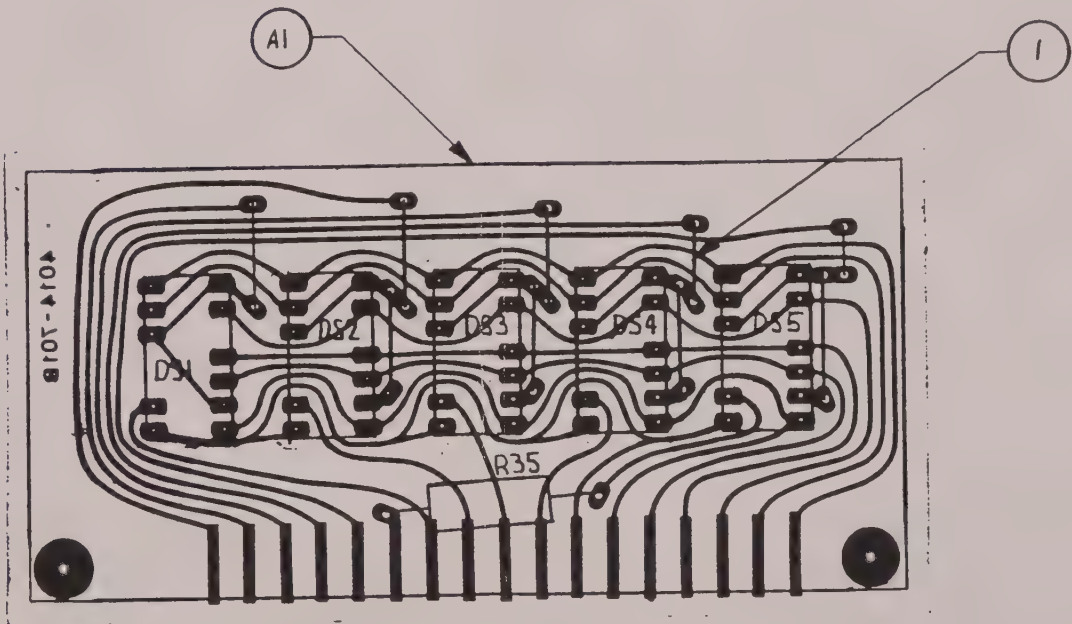





R35 IS USED ON 4100, 4150,
4165, & 4165-1344 ONLY.


CIRCUIT SIDE SHOWN

TOLERANCES:		MATERIAL:		 VALHALLA SCIENTIFIC 9955 MESA RIM ROAD, SAN DIEGO, CA 92121	
X° = ± 30'				THE INFORMATION DISCLOSED HEREIN WAS ORIGINATED BY AND IS THE PROPERTY OF VALHALLA SCIENTIFIC, INC. AND EXCEPT FOR RIGHTS EXPRESSLY GRANTED TO THE UNITED STATES GOVERNMENT VALHALLA SCIENTIFIC, INC. RESERVES ALL PATENT, TRADE, INVENTION, DESIGN, MANUFACTURING, USE AND REPRODUCTION RIGHTS THEREIN.	
.XX = ± .02					
.XXX = ± .005					
DEBURR AND BREAK ALL SHARP EDGES AND CORNERS		FINISH:		TITLE	
MACHINED SURFACES ARE TO HAVE A FINISH OF 63/✓				P.C.B. ASSEMBLY-	
				4100 SERIES DISPLAY BD.	
		SCALE: 2:1		STOCK NO.	
		SHEET 1 OF 1		DRAWING NO.	
				4100-601	
				REV: A	


REVISIONS				
ECON	LTR	DESCRIPTION OF CHANGE	DATE	APPROVED

- 2 WIRES ARE TO BE TWISTED WITH 1 TO 2 TWISTS PER INCH.

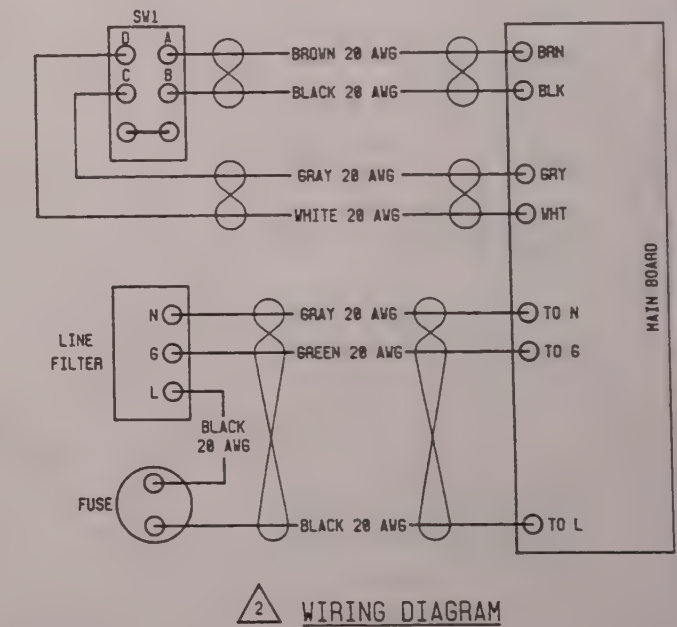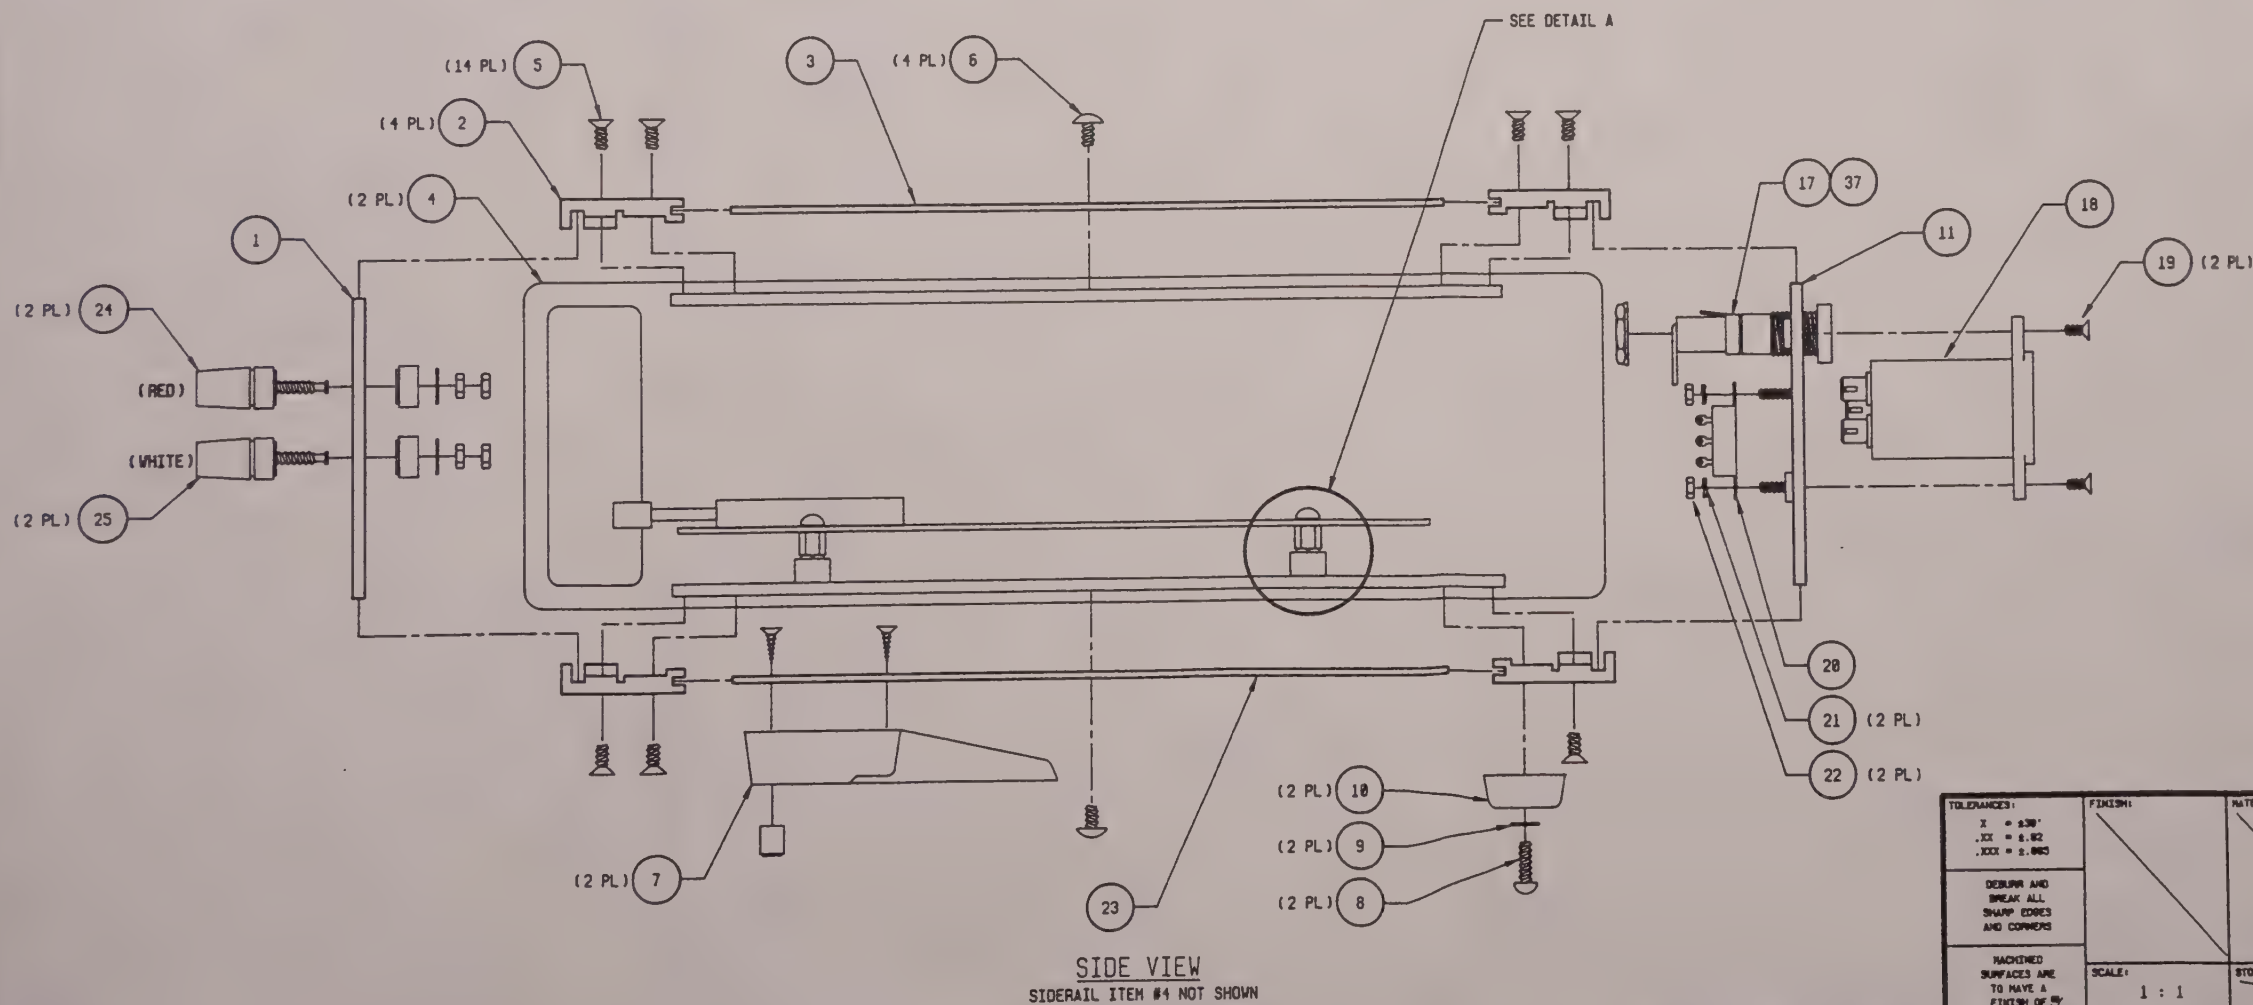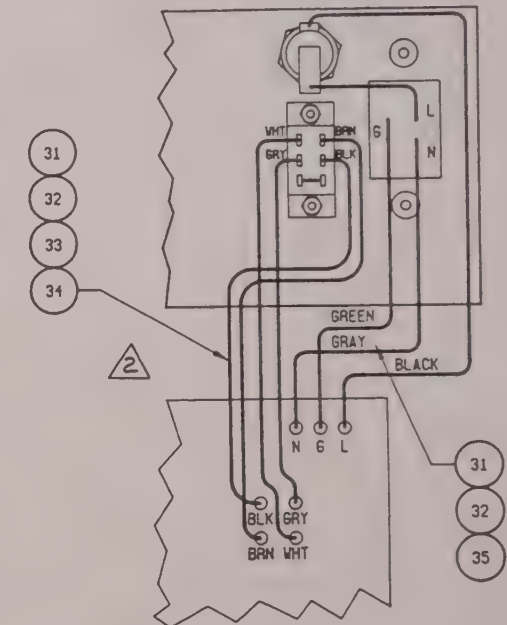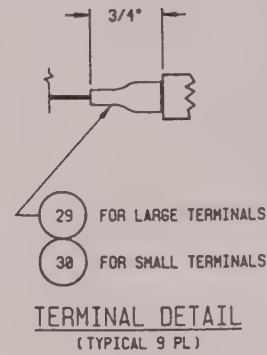





TOLERANCES: X = ±.30" .XX = ±.02 .XXX = ±.005	FINISH: 	MATERIAL: 	 VALHALLA SCIENTIFIC 9955 MESA RIM RD. SAN DIEGO, CA 92121	TITLE FINAL ASSEMBLY- MODELS: 4100, 4150, 4165
DEBURR AND BREAK ALL SHARP EDGES AND CORNERS			THE INFORMATION DISCLOSED HEREIN WAS OBTAINED BY AND IS THE PROPERTY OF VALHALLA SCIENTIFIC, INC. AND IS LOANED TO THE UNITED STATES GOVERNMENT BY VALHALLA SCIENTIFIC, INC. REPRESENTATIVE DESIGN. ALL RIGHTS ARE RESERVED. NO REPRODUCTION IS PERMITTED.	SHEET <u>1</u> OF <u>1</u>
MACHINED SURFACES ARE TO HAVE A FINISH OF 	SCALE: 1 : 1	STOCK NO.	DRAWING NO. 1100-400	REV: 

3814 REPLACEMENT BOARD
(SHT 2)


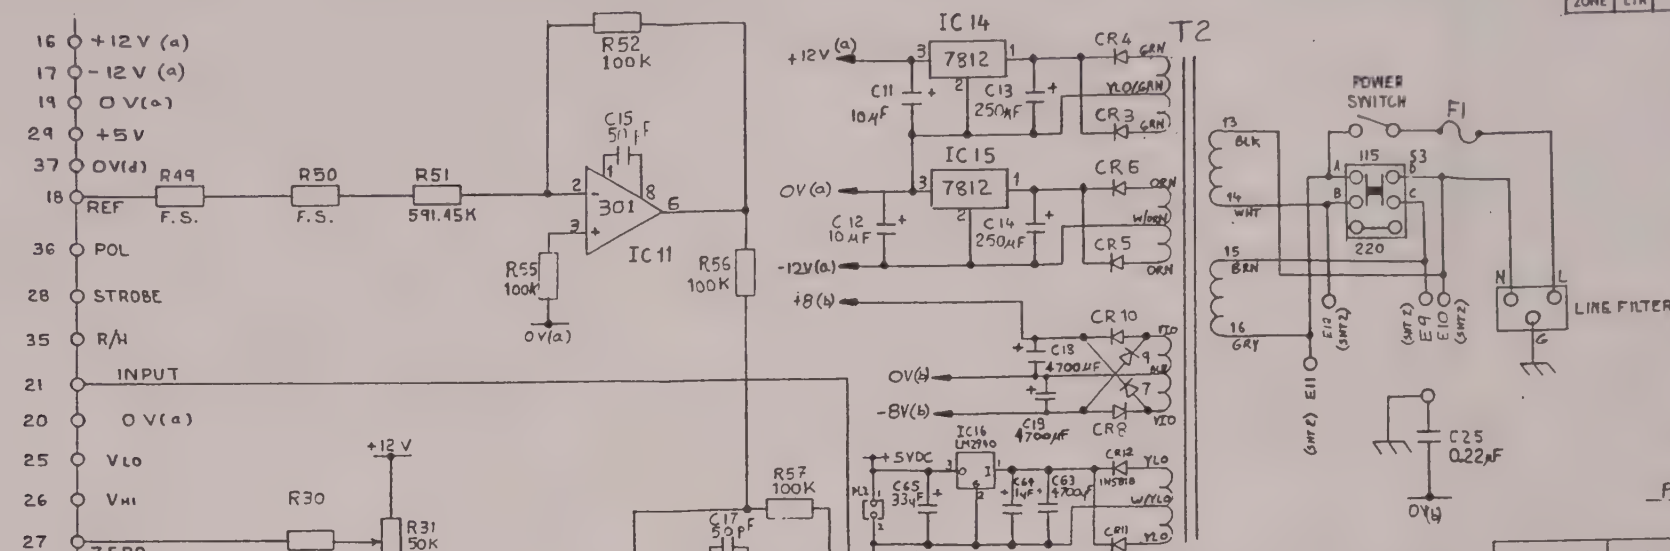


POWER CONNECTIONS

DEVICE	IC NO	-12V(a)	-12V(b)	0V(b)	+5V(a)	+12V
LM 301	11	4	-	-	-	7
LM 308	12, 13	4	-	-	-	7

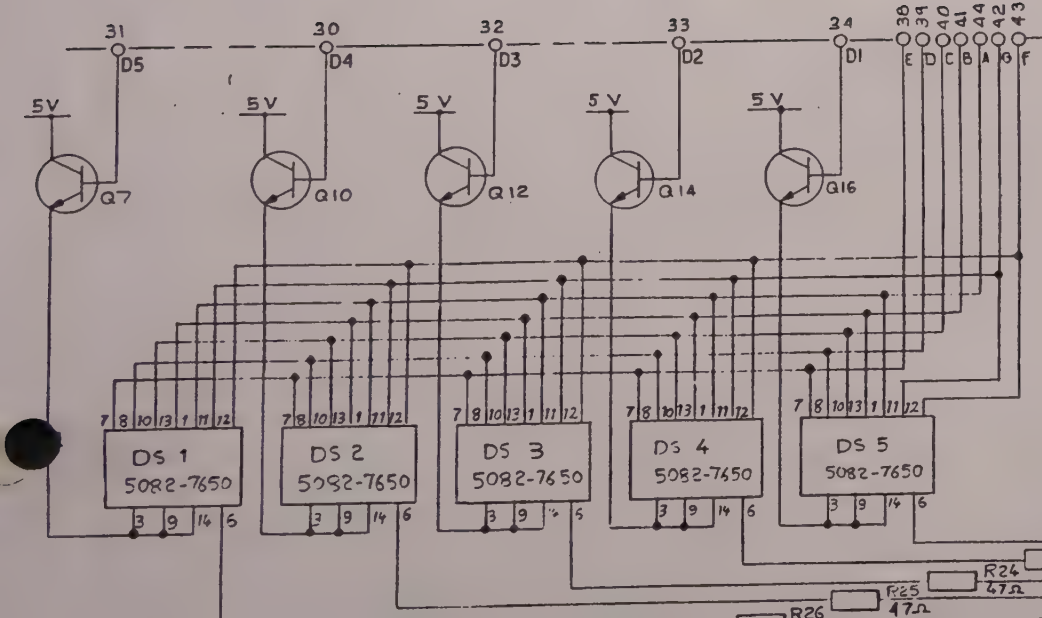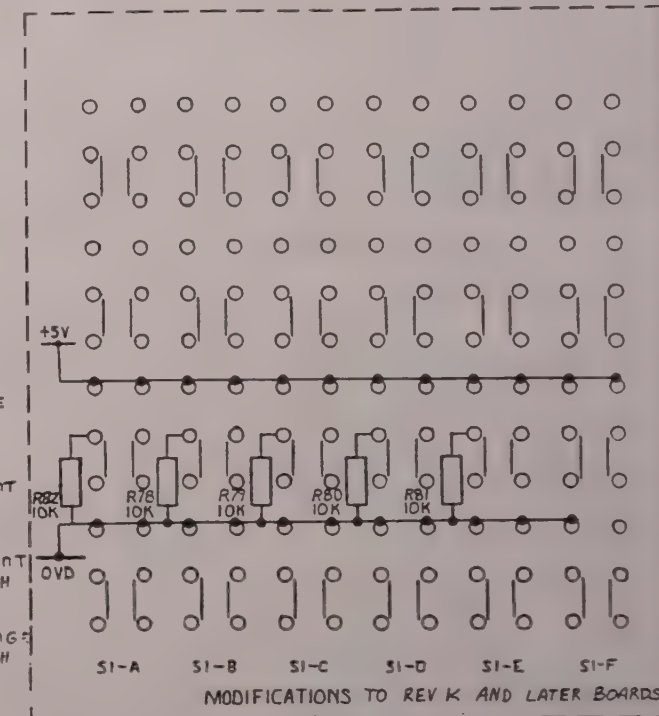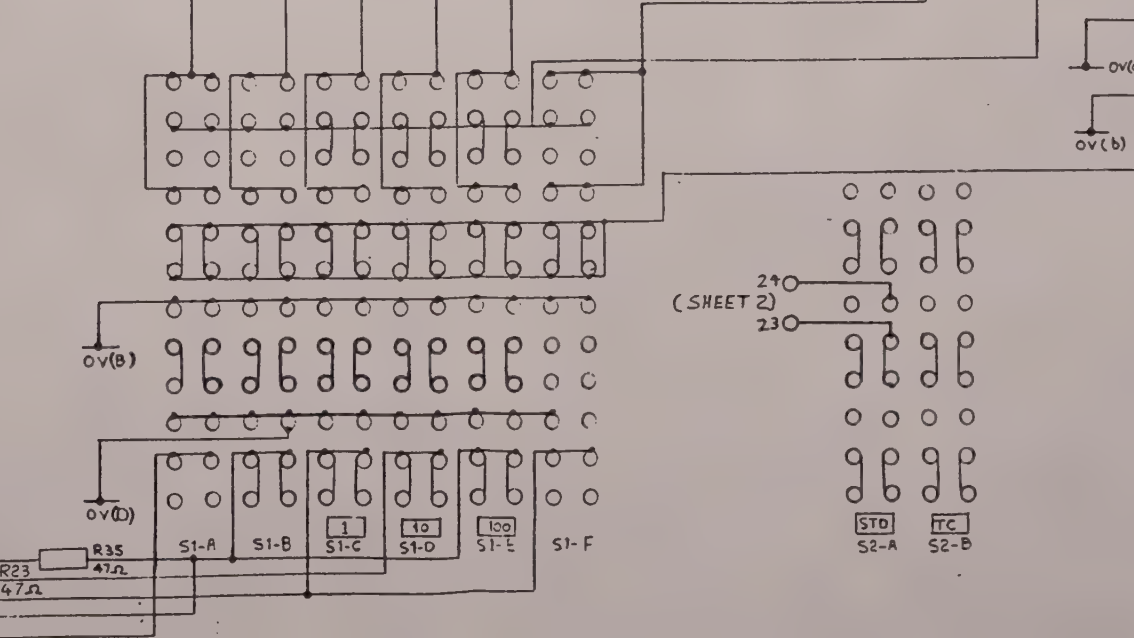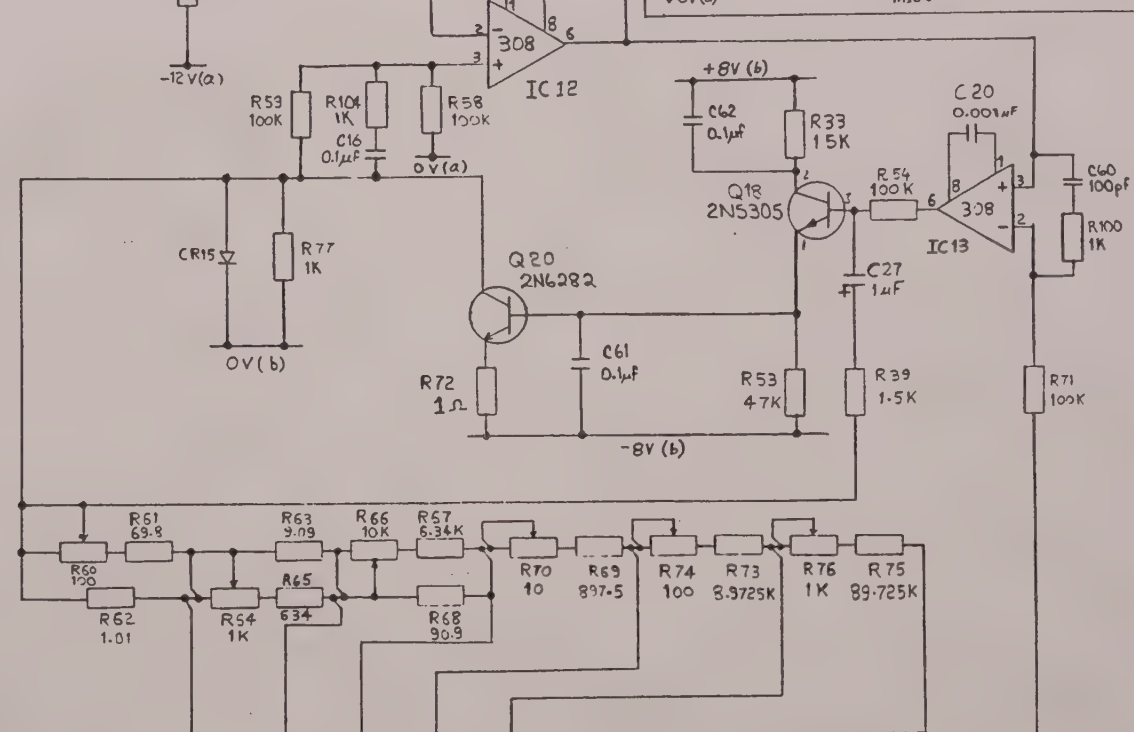

NOTES: (UNLESS OTHERWISE SPECIFIED)
 1. ALL UNMARKED DIODES ARE 1N4148.

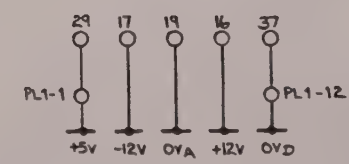
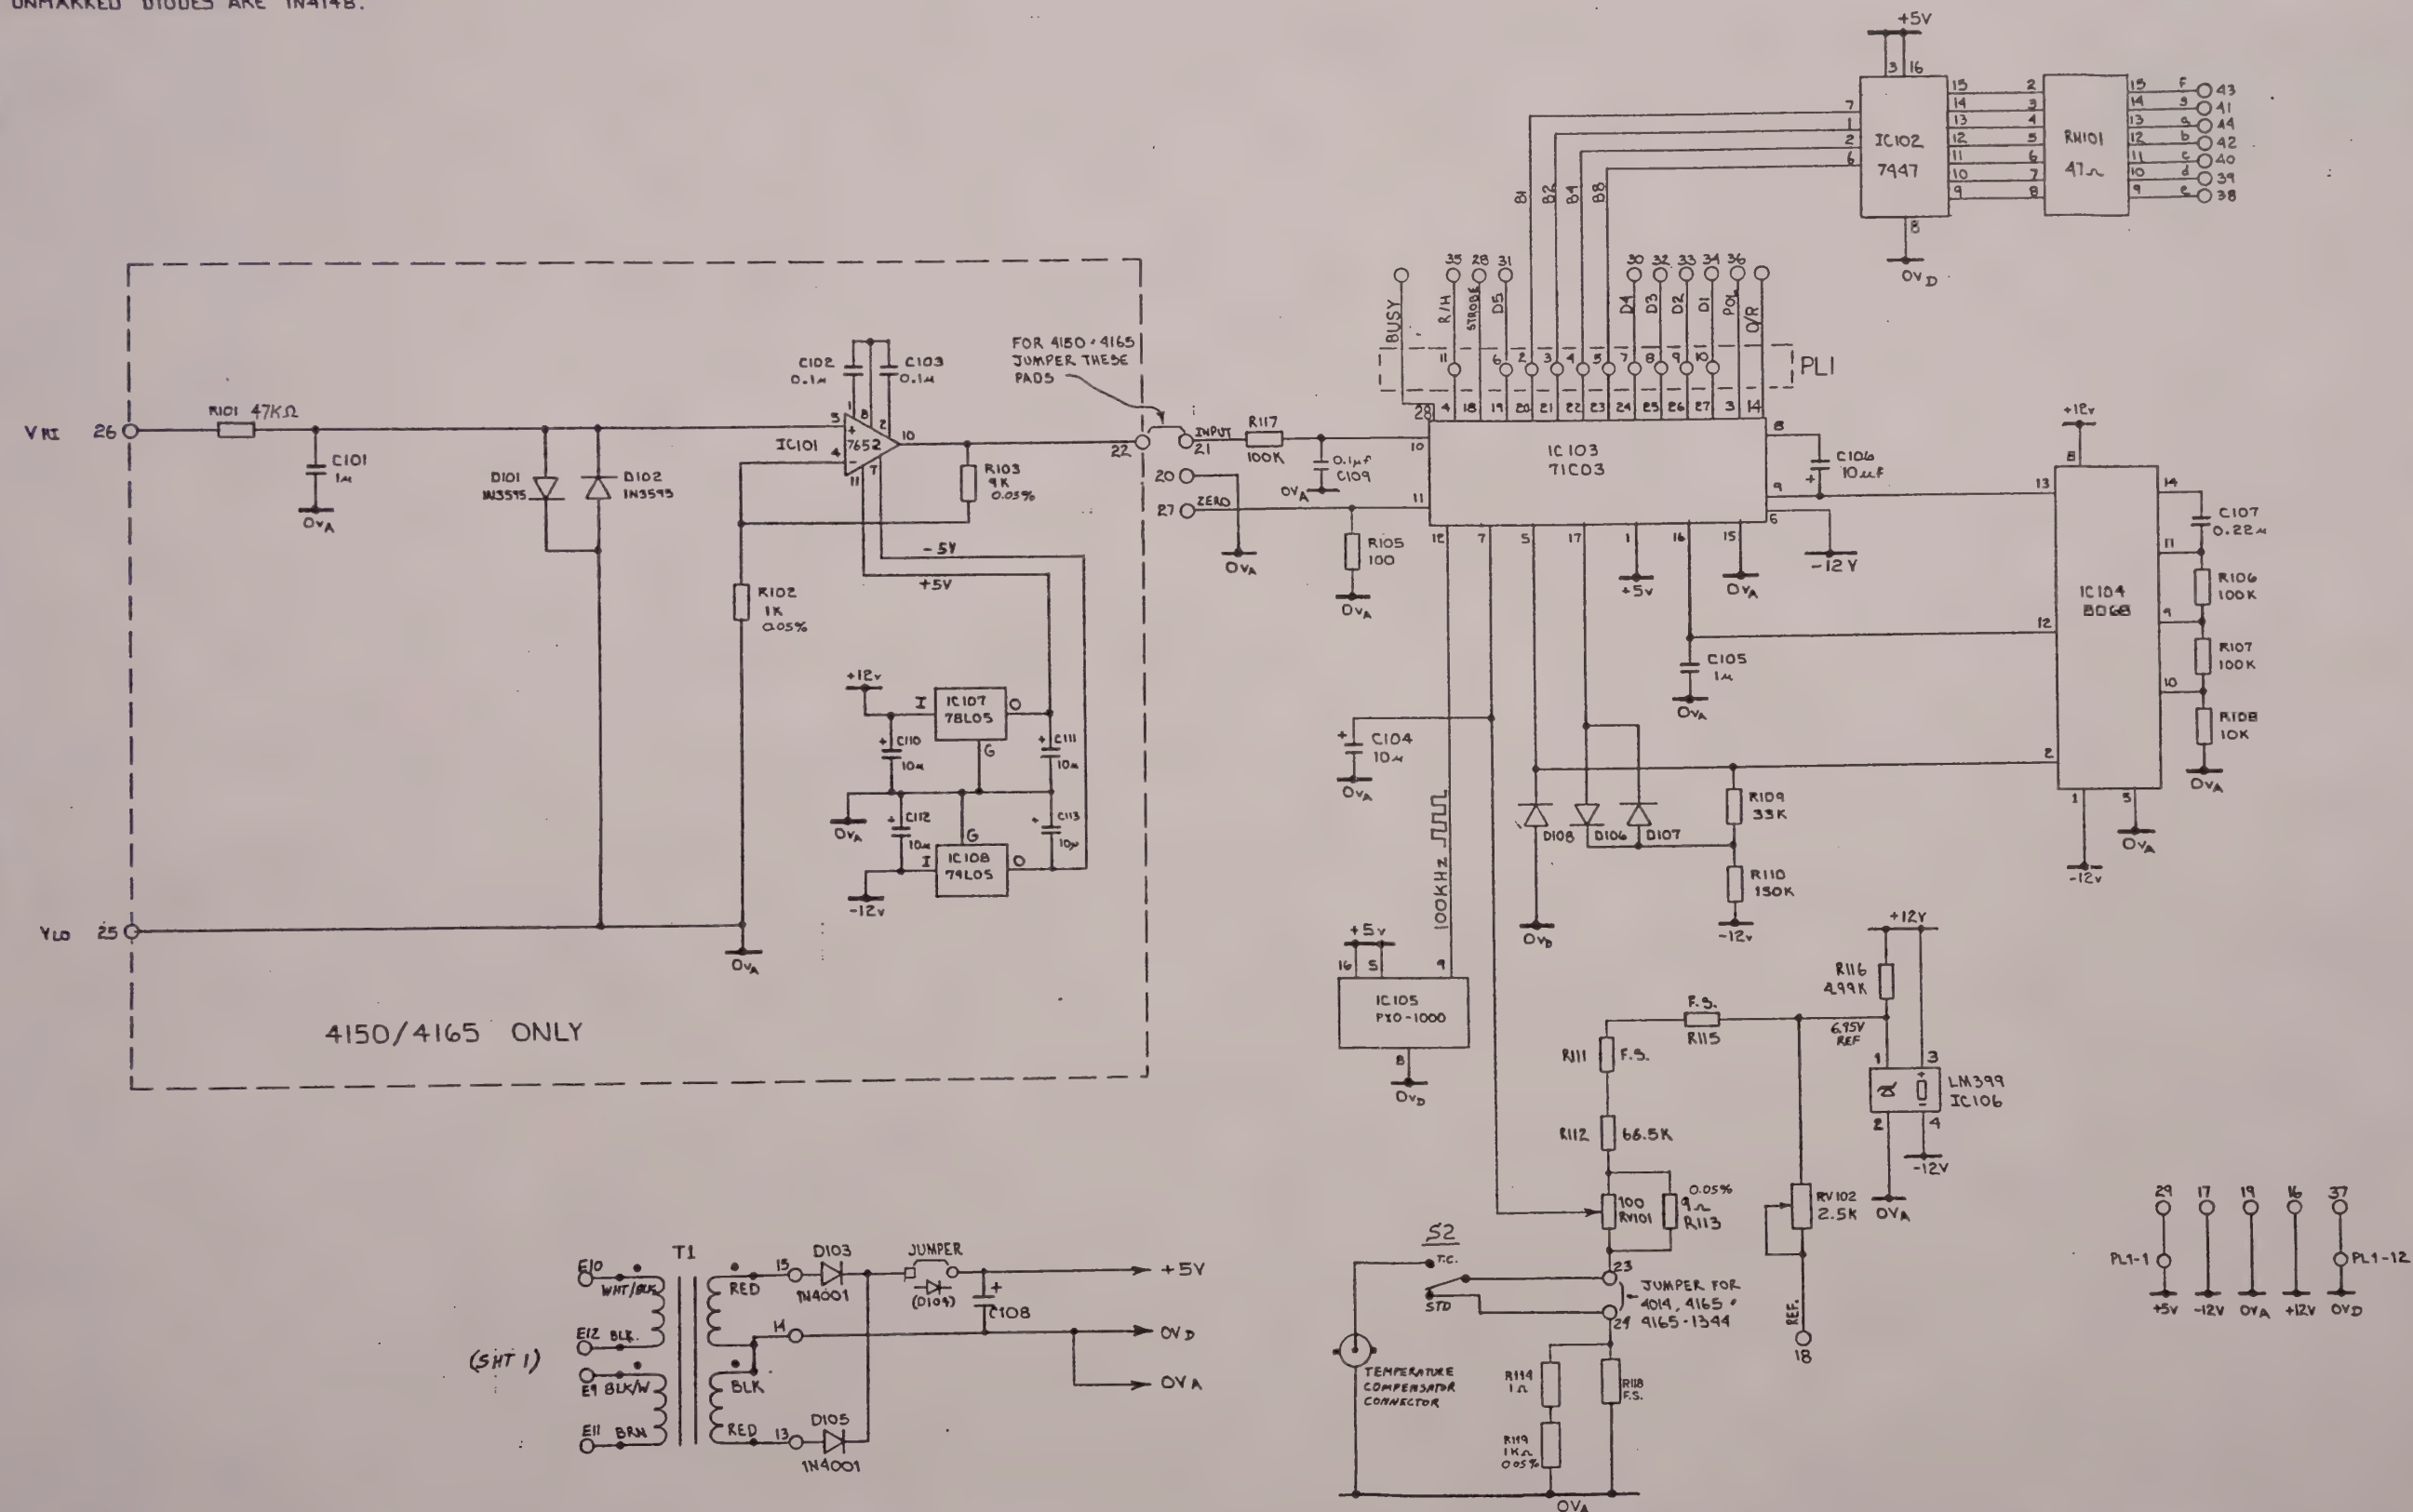


FIRST USED	NOT USED	LAST USED	TOLERANCES	MATERIAL	 Valhalla Scientific Inc. SAN DIEGO, CA
C101	—	C113	X = ± .30' .XX = ± .03 .XXX = ± .010	~	
D101	—	D108			THE INFORMATION SPECIFIED HEREON IS THE PROPERTY OF VALHALLA SCIENTIFIC, INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF VALHALLA SCIENTIFIC, INC. VALHALLA SCIENTIFIC, INC. IS NOT RESPONSIBLE FOR ANY REPRODUCTION OR TRANSMISSION OF THIS INFORMATION WITHOUT THE WRITTEN PERMISSION OF VALHALLA SCIENTIFIC, INC.
IC101	—	IC10			
R101	R114	R119	BREAK ALL SHARP CORNERS AND EDGES, MACH SURFACES	FINISH	
TR101	—	TR101	84 ✓	~	
RV101	—	RV103			
RN101	—	RN101			

SCALE	—	CODE IDENT	53504	SIZE	D	DRAWING NO	4100-074	REV	U
SHEET	2 OF 2								

SCHEMATIC: 4100ATC, 4150ATC, 4165, 4165-1344

NOTES: Unless Otherwise Specified

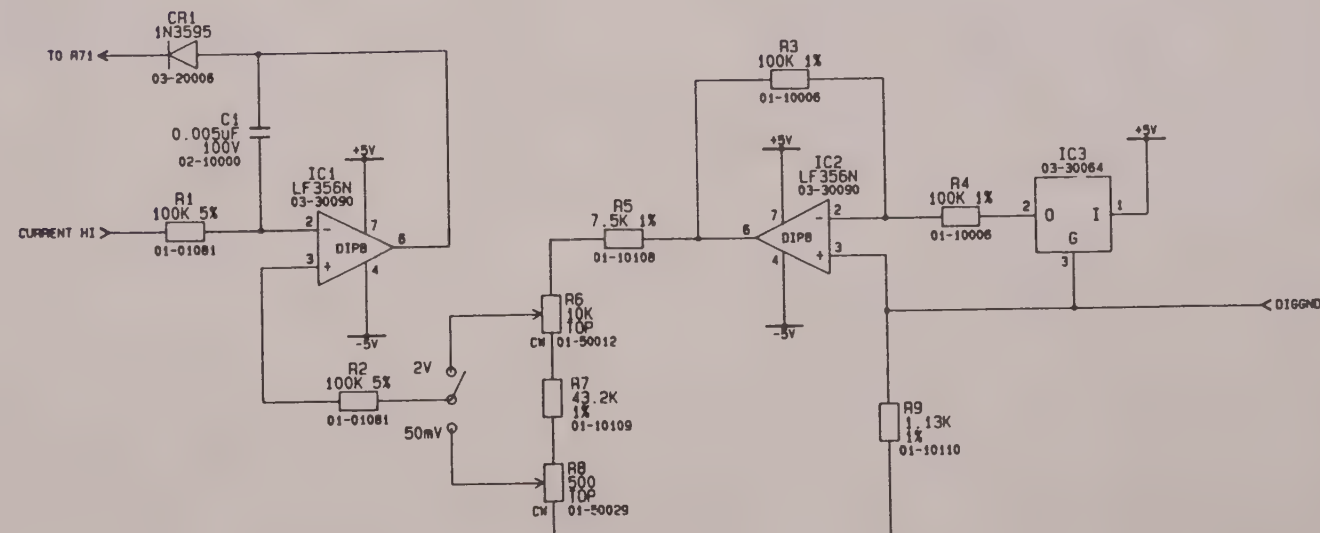
VALHALLA
SCIENTIFIC


9955 MESA RIM RD. SAN DIEGO, CA 92121

TITLE SCHEMATIC-4165
OUTPUT VOLTAGE CLAMP


SHEET 1 OF 1	DRAWING NO. 4165-070	REV. B
--------------	-------------------------	-----------

NOTES: Unless Otherwise Specified

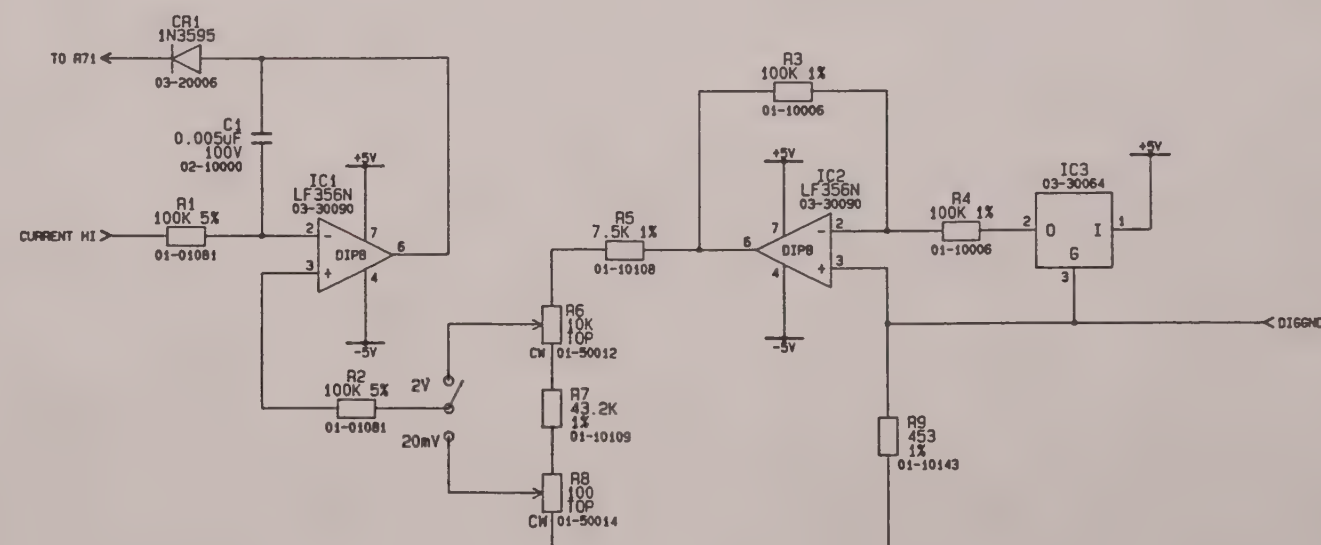

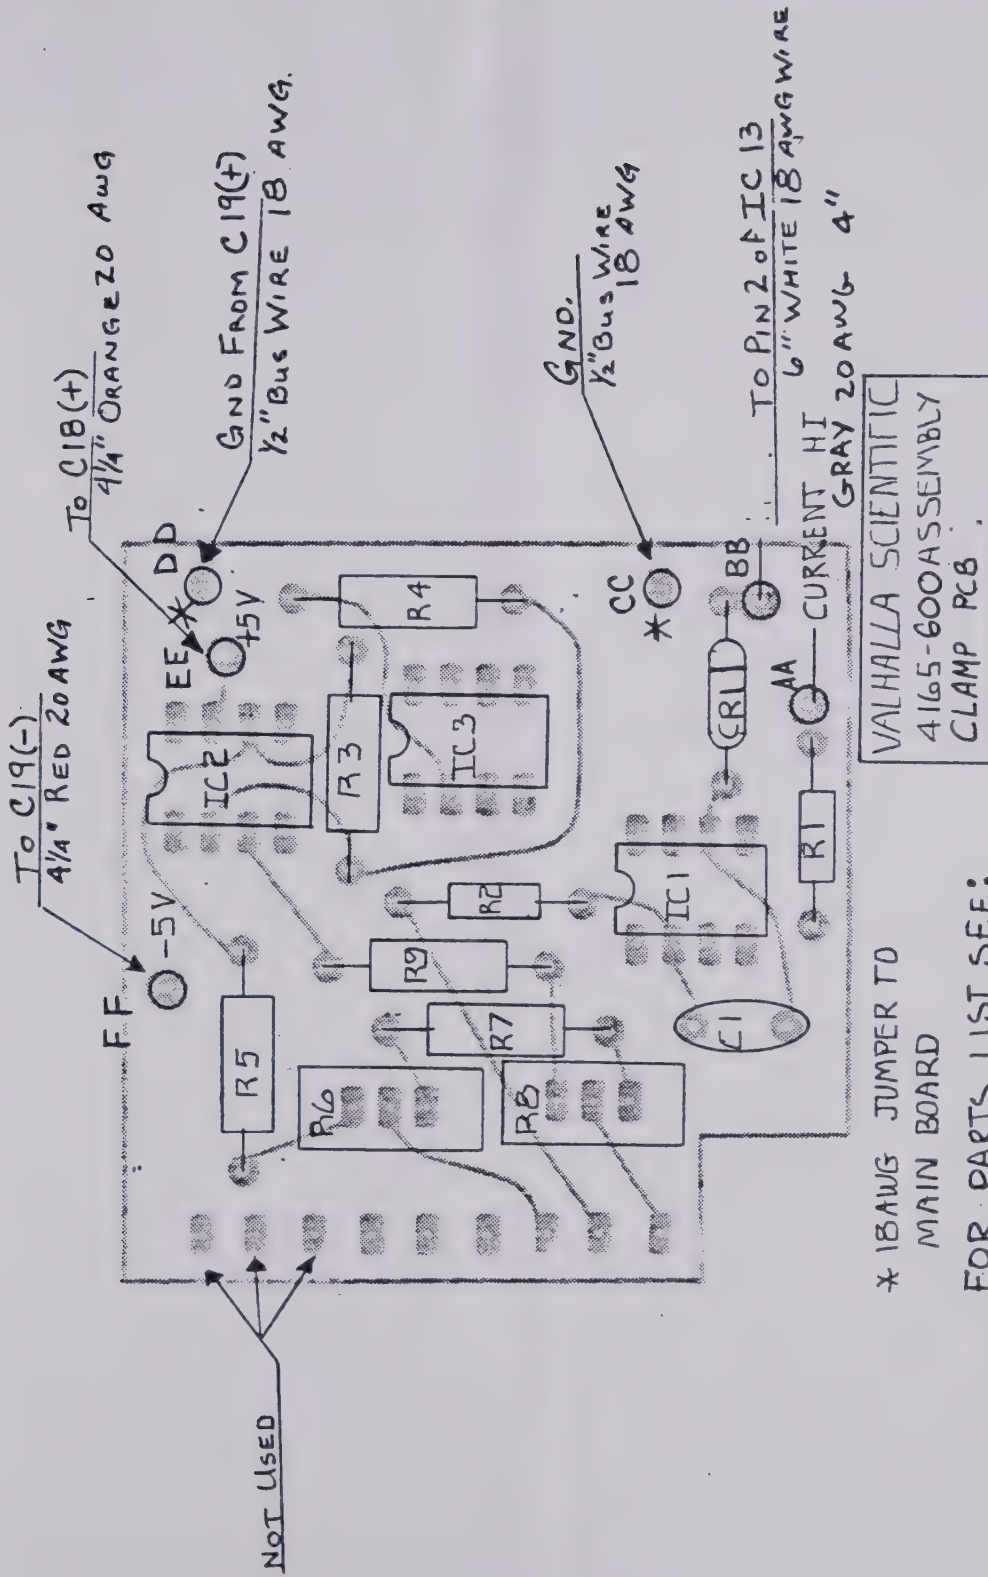




REVISIONS				
ECO	LTR	DESCRIPTION	DATE	APPROVED

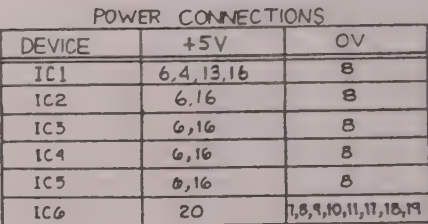

C1	_____	C6	TOLERANCES X = ± .30" .XX = ± .03 .XXX = ± .010	MATERIAL	 Valhalla Scientific Inc. SAN DIEGO, CA		BCD SCHEMATIC 2053A / 4100ATC / 4150ATC / 4014			
IC1	_____	IC5								
R1	_____	R1								
SK1	_____	SK2								
			BREAK ALL SHARP CORNERS AND EDGES, MACH SURFACES 64 ✓	FINISH	THIS DRAWING IS THE PROPERTY OF VALHALLA SCIENTIFIC INC. AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF VALHALLA SCIENTIFIC INC.					
FIRST USED	NOT USED	LAST USED			SCALE NONE	CODE IDENT 53504	SIZE D	DRAWING NO 2053-076	REV C	
					SHEET 1 OF 1					


NOTES: (UNLESS OTHERWISE SPECIFIED)

1. FOR PCB AND INSTALLATION PARTS LIST, SEE 4100-407.
2. FOR SCHEMATIC SEE DWG 2053-076.

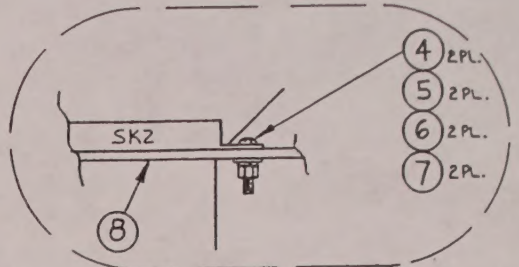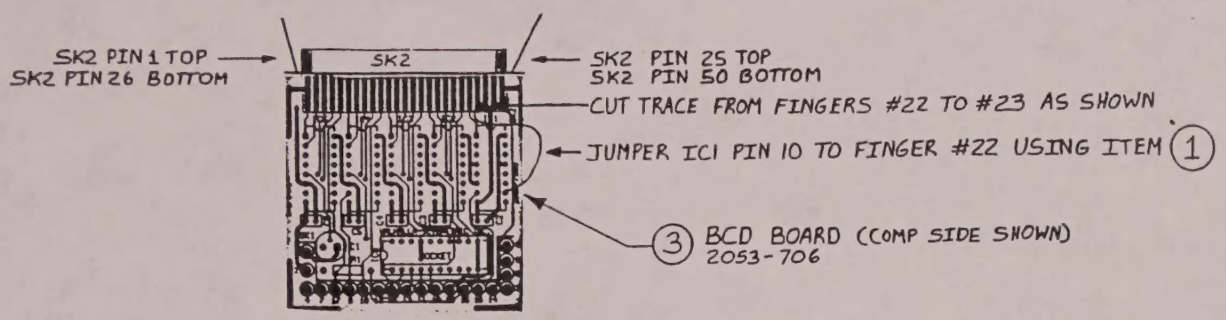


③ 12-PIN CONNECTOR
(S-10498)

(OHMMETER)		(2053-706)	
FROM	FUNCTION	TO SKI-	WIRE COLOR
SK3-1	5V	1	BROWN
SK3-2	B1	6	BLUE
SK3-3	B2	7	VIOLET
SK3-4	B4	8	GREY
SK3-5	B8	9	WHITE
SK3-6	D5	5	GREEN
SK3-7	D4	10	BLACK
SK3-8	D3	11	BROWN
SK3-9	D2	12	RED
SK3-10	D1	13	ORANGE
SK3-11	R/H	3	ORANGE
SK3-12	O/V	2	RED
IC103, PIN 28	BUSY (Eoc)	4	YELLOW
EPAD #28	STROBE	16	BLUE
IC103, PIN 14	OVERRANGE	15	GREEN

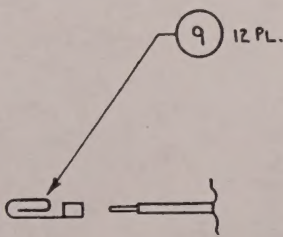


CRIMP USING MFR RECOMMENDED TOOL

MOUNT B.C.D. BOARD
WITH COMPONENT SIDE
UP.

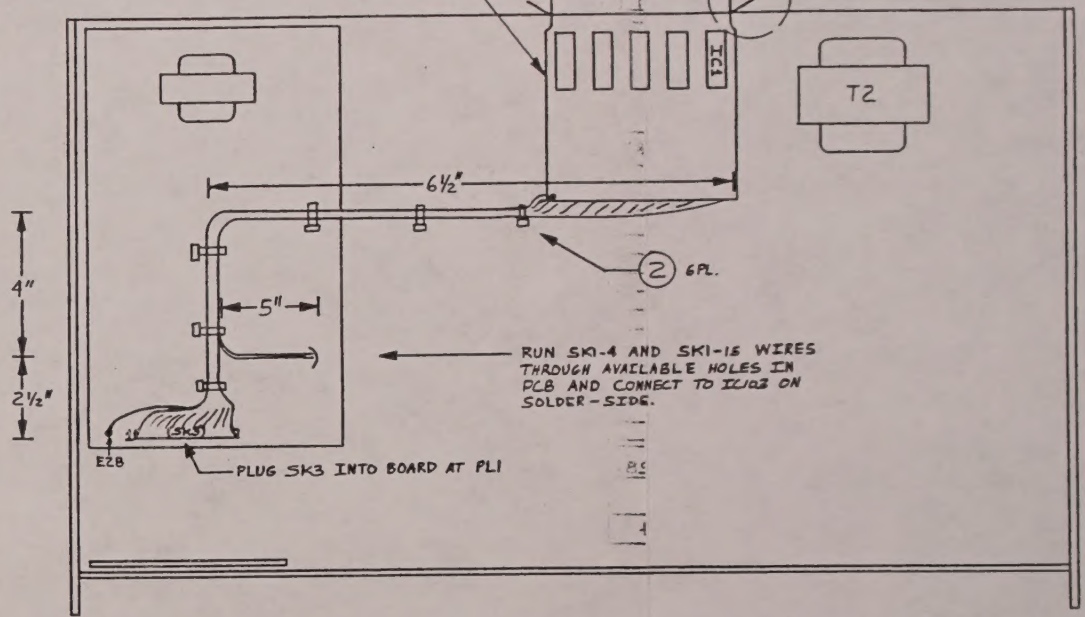

TOLERANCES				MATERIAL		FINISH		Valhalla Scientific Inc. SAN DIEGO, CA				
				X	± .30"			OPTION "B.C.D." ASSEMBLY				
				XX	± .03							
				XXX	± .010							
BREAK ALL SHARP CORNERS AND EDGES, MACH SURFACES												
DASH NO	QTY REQD	NEXT ASSEMBLY	USED ON	84				SCALE NONE	CODE IDENT 53504	SIZE D	DRAWING NO 4100-407	REV E
								SHEET 1 OF 1				



Certification of Calibration

Model No. 4150ATC Serial No. 8-3955 Report No. M122195C

Applicable NBS Report No.

DC Voltage USN22783C?45662-3.5..2
AC Voltage 53200S
Resistance G-45994

Valhalla Scientific does hereby certify that the above referenced instrument was tested and calibrated using standards whose accuracies are traceable to the National Institute of Standards and Technology within the limitations of the Institute's calibration service, or have been derived from accepted values of natural physical constants, or have been derived by the ratio type of transfer self-calibration techniques.

Temperature 23 °C Calibration Due JANUARY 22, 1997

Humidity 45 % Return Status N/A

Certified by *David A. Blood* Date JANUARY 22, 1996
Quality Assurance

